

PS532RF / PS532RFA POWER SUPPLY INSTALLATION INSTRUCTIONS



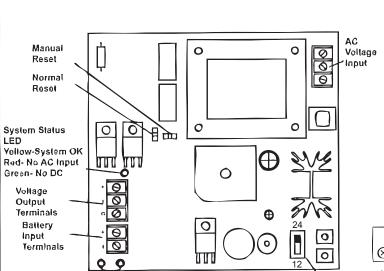


COMPONENT LOCATIONS

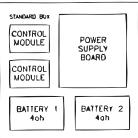

PS532RF

MAIN SYSTEM ON-OFF OR FIRE PANEL CONNECTION

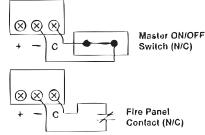

Min. Switch or Contact Ratings 100ma. @ 30vdc

POWER SUPPLY SPECIFICATIONS

Voltage

Switches

Select

Input Voltage: 115 VAC @ 60hz Input Current: 1.0 amps Max.

Battery

Charger Status

Output Voltage: 12/24 VDC (Regulated & Filtered)

Output Voltage Ranges:

12 V Operation: 9.2 - 12.0 VDC 24 V Operation: 21.2 - 24.0 VDC

Output Current: 2.0 amps Ripple Voltage: 0.05 Volts Max

Battery Charger Max Current: 0.25 amps MaxImum recommended battery size: 4ah


(Replace batteries every 3 years.)

Suitable Uses:


Electric Lock Power Supply Access Control Power Supply

TEST UNIT YEARLY

For wire gage chart, and to determine battery backup capacity refer to charts in the sales brochure.

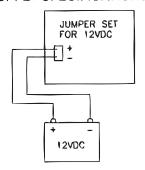

12 Volt Mode Battery Connections

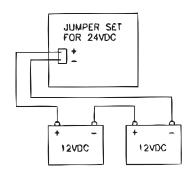

24 Volt Mode Battery Connections

