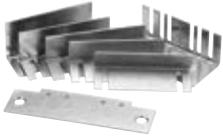


Accessories

ITEM	ACCESSORY	DESCRIPTION
	HES CUT-MTK Metal template kit	<ul style="list-style-type: none"> For installing the HES 1006, 1500, 1600, 4500, 5000, 5200, 7000 and 7501 electric strikes. 4-7/8" [123.8mm] ANSI jamb preparation only.
	9000-MTK Metal template kit	<ul style="list-style-type: none"> For installing the HES 9400, 9500, 9600, 9700, and 9800 surface mounted electric strikes. Magnetic backing.
	SMB Surface mounting box	<ul style="list-style-type: none"> Installs on inactive door of pair of doors to accommodate rim-exit devices. To be used with the HES 7000 (783S and 789S), 9400, 9500, 9600, 9700 and 9800 electric strikes series. Available in black finish only.
	150 Strike latch guard	<ul style="list-style-type: none"> Stainless steel. Installed at the edge of the door to cover the lock and electric strike.
	152 Universal mounting tabs	<ul style="list-style-type: none"> Mount inside hollow metal and aluminum jambs.
	157 Torx® screws	<ul style="list-style-type: none"> Two (2) 12-24 UNC x 3/4" [19mm] FH Tamper resistant Pin-in-Torx® screws.
	157D Torx® security bit	<ul style="list-style-type: none"> Tamper resistant Torx® R20 insert bit.

Accessories

ITEM	ACCESSORY	DESCRIPTION
	310-2-3 <i>Astragal strike latch guard</i>	<ul style="list-style-type: none"> Designed to prevent tampering with the latchbolt, and the latchbolt keeper. Prevents one door from being opened before the other.
	2001-1 <i>Wire-in bridge rectifier</i>	<ul style="list-style-type: none"> Converts AC to unfiltered DC. Rated 35 V, 2 Amp. Not recommended for HES 1006 Electric Strike.
	2001M <i>Plug-in bridge rectifier</i>	<ul style="list-style-type: none"> Converts AC to unfiltered DC. Rated 35 V, 1 Amp. Includes MOV and self-resettable fuse Not recommended for HES 1006 Electric Strike.
	2004M <i>ElectroLynx® adapter</i>	<ul style="list-style-type: none"> Adapter between existing HES electric strikes and ElectroLynx® connectors.
	2005M3 <i>SMART Pac® III</i> <i>Addition of Smart Pac to any electric strike extends the 5 year no-fault warranty to a 10 year no-fault warranty.</i>	<ul style="list-style-type: none"> In-line power controller able to receive input voltages from 12- 32V AC or DC. Built-in bridge rectifier. Reduces initial voltage by 25% to extend the life of the electric strike. Includes built-in resettable fuse, MOV, voltage regulation and input voltage level indicating and unit status. For use with 1006, input voltage must be DC.
	2006M <i>Plug-in buzzer</i>	<ul style="list-style-type: none"> Audible operation indicator at 24 VDC, 75db at 11-3/4".
	2007M <i>Plug-in pigtail connectors</i>	<ul style="list-style-type: none"> With 4" wire leads.