


801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 • www.sdcsecurity.com • E-mail: service@sdcsecurity.com

INSTALLATION INSTRUCTIONS ELECTRIC LATCH RETRACTION KIT LR100FCK FIRST CHOICE MODELS: 3600 & 3700

Remove the push bar. Remove the dogging assembly. Bend Push Bar Spring Box open as shown, to allow Linkage access. Depress the push bar spring box then slide the ELR unit into the device base. Align the second set of two holes over the two base unit holes and attach with the two #10-32 flat head screws supplied. Attach the Linkage with supplied screw as shown. Reattach the Push Bar.

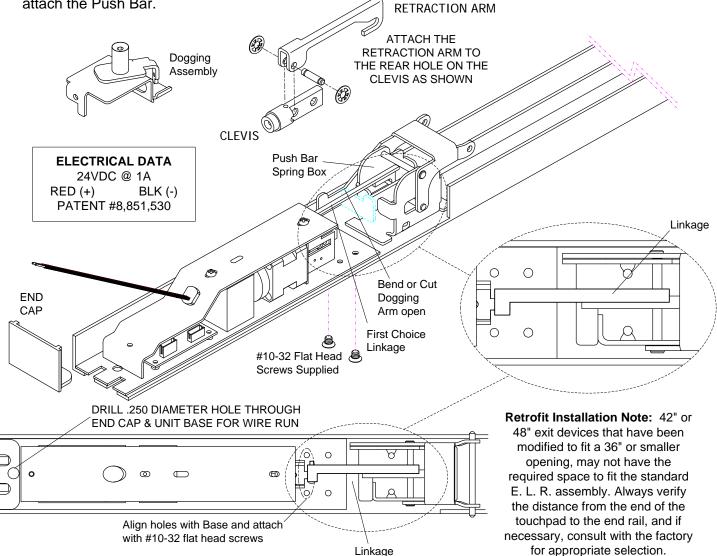

When retrofitting to existing vertical rod devices, adjustment of the rods is required for proper operation of the Electric Latch Retractor. Once the unit is properly installed, energize it so the push pad is dogged down, then reconnect the vertical rods to the device and make the proper adjustments.

Any suggestions or comments to this instruction or product are welcome. Please contact us through our website or email engineer@sdcsecurity.com