INSTALLATION INSTRUCTIONS BATTERY BACK-UP

BT-150-07


WARNING: DISCONNECT POWER BEFORE SERVICING. FOR USE WITH ELR-150 SUPPLIES.

SELECT BATTERIES:

- I. Two I2 VDC Lead acid type batteries are required.
- 2. All batteries must be the same brand, size and type.
- 3. The amount of back-up time achieved will vary depending on usage and installation.
- It can be estimated that a 4 amp-hour battery will power 4 devices for approximately I hour.

INSTALL BATTERIES:


- I. Batteries should be mounted in a separate ventilated box (not provided) with 3 feet or less of 12 gage wire. Make wire connections to the battery terminals of the module (Note polarity).
- 2. Wire the batteries in series (totaling 24 volts)

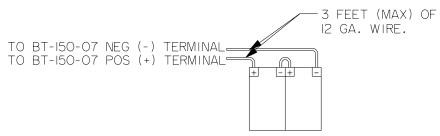

INSTALL THE CARD:

TURN BATTERY DISCONNECT SWITCH TO OFF POSITION

The BT-I50-07 Module can be installed in any of the sockets or into the J3 expansion slot as shown.

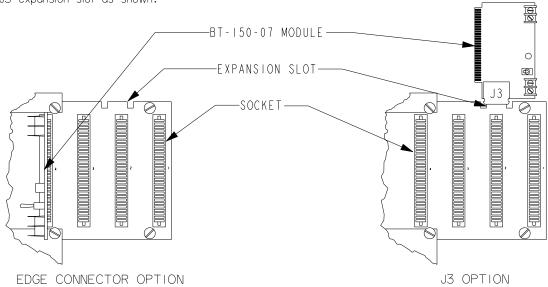

Align card edge with socket and push until seated.

Install the 2 provided push spacers into the base plate (fig. 4) and align with the expansion slot and push until seated.



DRWG DATE 02202-11 12-30-03

Precision Hardware

a Division of Stanley Security Solutions, Inc.
www.stanleysecuritysolutions.com

REVISION

