



921250-00

880DT/EO/NL/TP/TP-BE

VON DUPRIN®

Installation Instructions

Trim for 44 and 88 Rim Devices

880TP/TP-BE (see other side for 880DT/EO/NL)

- Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
- **2.** Prepare door for trim:
 - A. Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled.
 - **B.** Locate and prepare all holes as shown.


IMPORTANT

Note that trim center line is offset from line X-X by 1/8" as shown.

3. For TP trim, install cylinder in trim. Cut cylinder tailpiece to extend out of exit device side of door as follows:

44 Rim device: 3/16" to 1/4" extension 88 Rim device: 5/8" to 3/4" extension

- **4.** Cut thumbpiece to extend 5/8" to 3/4" out of exit device side of door.
- 5. Apply trim.
- 6. Apply exit device.

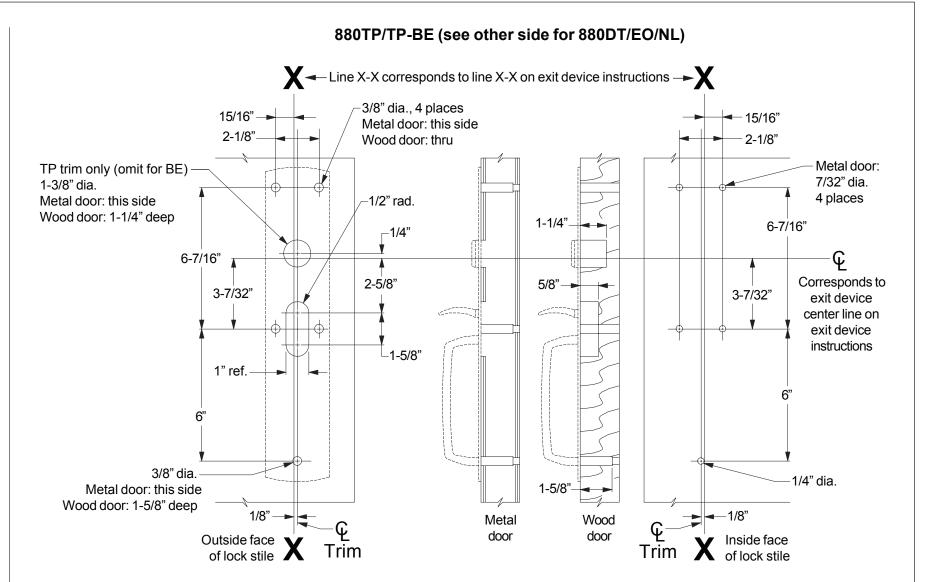

LHR shown, RHR opposite

For cutouts on inside face of door, see exit device instructions

880DT/EO/NL (see other side for 880TP/TP-BE)

- **1.** Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
- **2.** Prepare door for trim:
 - **A.** Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled.
 - **B.** Locate and prepare all holes as shown.


A

IMPORTANT

Note that trim center line is offset from line X-X by 1/8" as shown.

- 3. For NL trim, install cylinder in trim. Cut cylinder tailpiece to extend 5/8" to 3/4" out of exit device side of door.
- **4.** Apply trim.
- 5. Apply exit device.

880DT/EO/NL (see other side for 880TP/TP-BE)

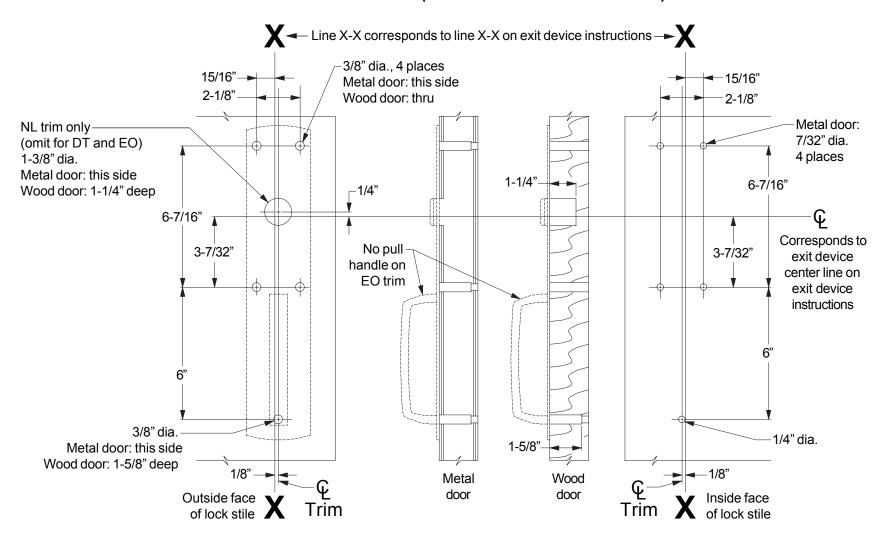

LHR shown, RHR opposite

For cutouts on inside face of door, see exit device instructions

