

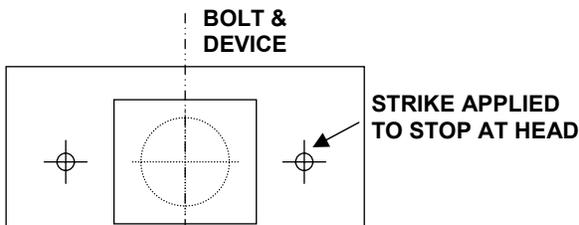
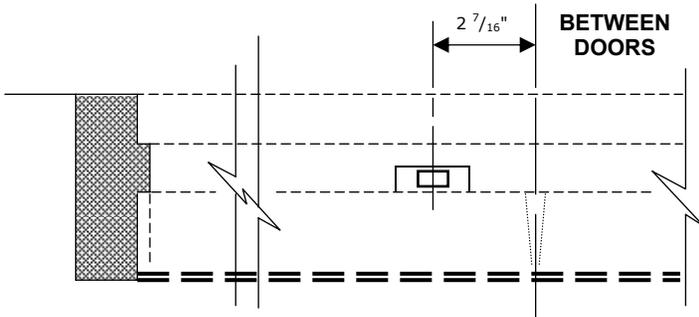


NO.44 DOUBLE DOOR HOLDER INSTALLATION TEMPLATE


NOTE
DO NOT REMOVE NAIL
UNTIL INSTALLATION IS
COMPLETED

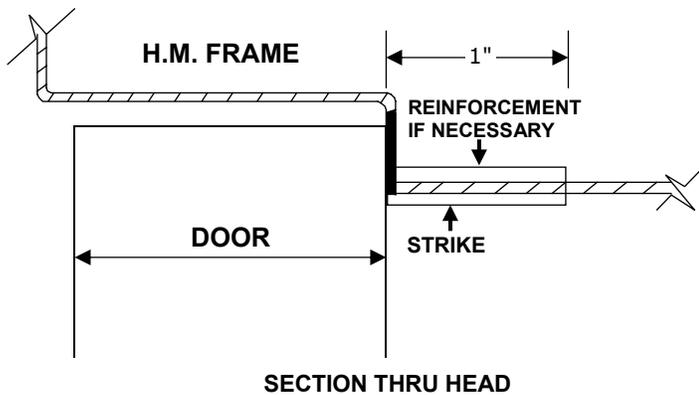

FOLD 90° ON DOTTED LINE - FOLD FIRMLY AGAINST STOP AT HEAD & INACTIVE DOOR. MARK HOLES WITH PUNCH

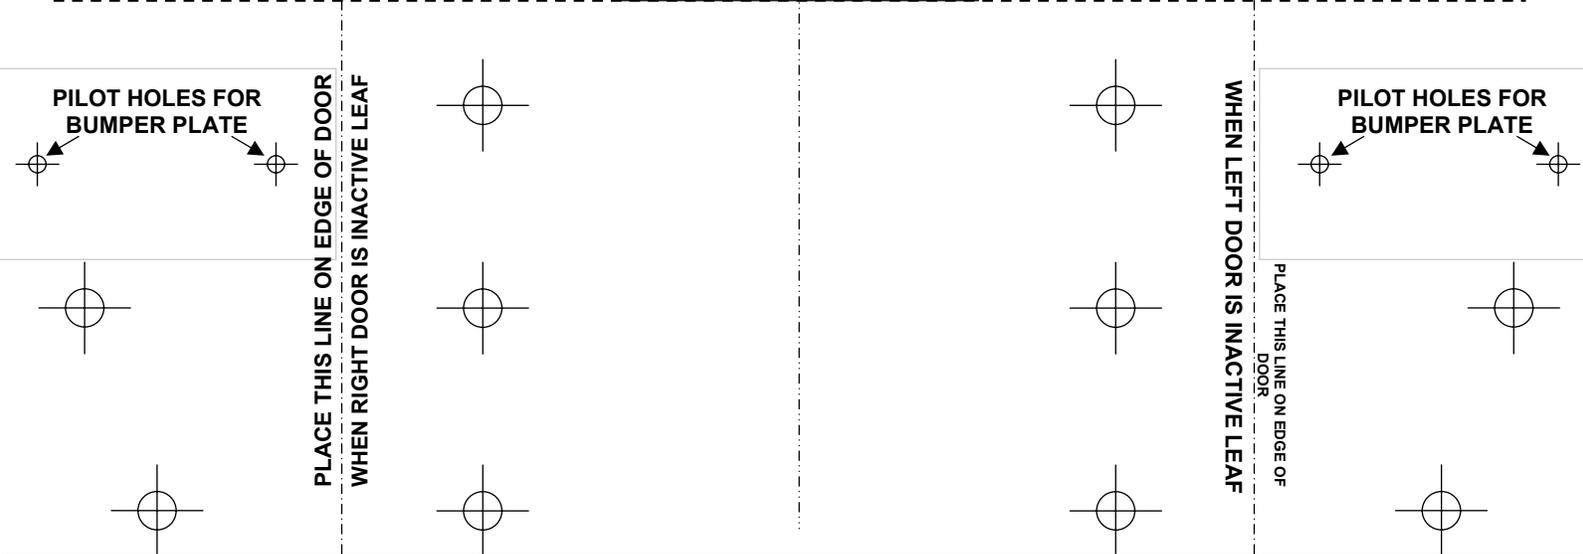

PLAN AT HEAD
SHOWN FOR RIGHT HAND INACTIVE
OPPOSITE FOR LEFT HAND INACTIVE

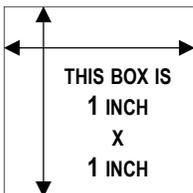

P3206 04/10

© ALARM LOCK 2010



345 Bayview Avenue, Amityville, New York 11701
For Sales and Repairs 1-800-ALA-LOCK
For Technical Service 1-800-645-9440
(Note: Technical Service is for locksmiths and alarm professionals only)
Publicly traded on NASDAQ Symbol: NSSC

INSTALLATION INSTRUCTIONS

1. Use template above and mark 8 mounting holes for 44 holder, 2 for strike plate, 1 for bolt center and 2 for bumper plate.
 2. Drill 8 pilot holes for 44 holder and mount to inactive leaf with 8 #10 self-tapping screws.
 3. Drill 9/16" – 5/8" hole for bolt at head.
 4. Drill 2 pilot holes for strike plate and mount with 2 #6 self-tapping screws.
- Note:** Light gauge hollow metal frames may require reinforcement.
5. Drill 2 pilot holes for bumper plate and mount to active leaf with 2 #6 self-tapping screws.
 6. Install lever and cover with 6 6-32x3/8 flat head machine screws.
 7. Remove nail from bolt and test for proper operation.