



Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130-3045
(830)629-2900 / 1-800-729-3839 / Fax 1-800-653-3839 / Text: 1-830-481-6433 / INTERNET: www.detex.com


INSTALLATION INSTRUCTIONS FOR ECL-230X & H-ECL-230X HURRICANE DEVICES

Drawing: 103600

Table of Contents	Page
Device parts breakdown view.....	2
Device parts breakdown list with part numbers.....	3
Hardware List with part numbers & tools required.....	4
Device applications.....	5
Door condition check.....	6
Use template to locate strike and backplate.....	7
Drill strike and backplate holes, install backplate,.....	8
Install Inside Pull Kit (if ordered).....	8
Outside Key Control (OKC) installation (if ordered).....	9
Outside Pull plate or Trim plate (if ordered).....	10
Install Device.....	11
Install Rim cylinder & sign.....	12
Install Deadbolt strike (if ordered).....	13
2 point and 3 point installation (Top) mark locations.....	14
2 point or 3 point installation (Bottom) mark locations....	15
Top strike & top bolt installation.....	16
Bottom strike & bottom bolt installation.....	17
Top & bottom cover and rod guide installation.....	18
Deadbolt & top bolt installation (TD).....	19
Install battery & cover.....	19
Double door strike installation.....	20
Troubleshooting, Testing & Adjustment.....	21
Cutting top rod (for non standard doors).....	22
Optional Accessories.....	22
Template for outside trim.....	23

For device installation videos,
scan code below or
go to detex.com











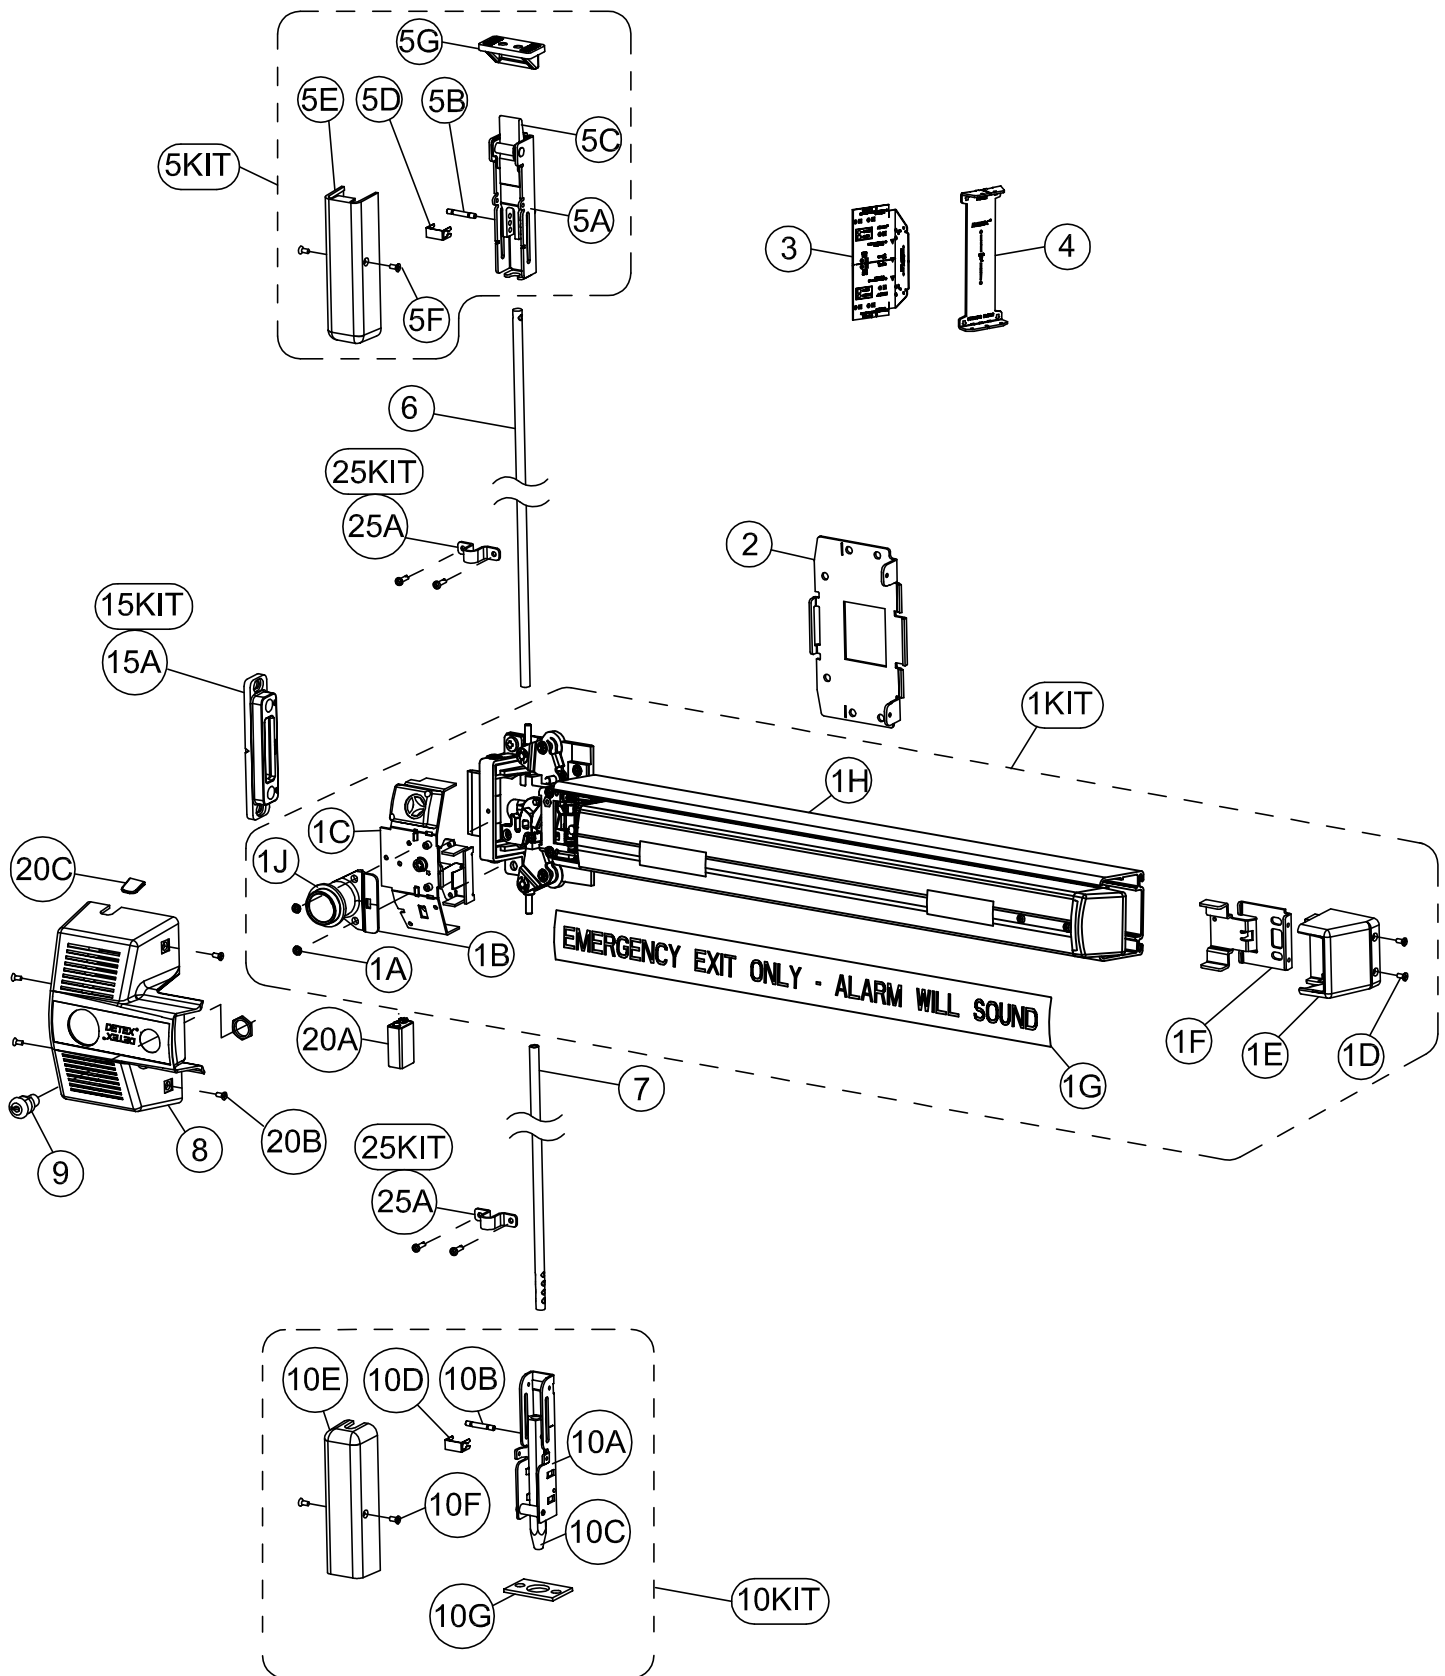

Your particular part or configuration may not be shown: contact Detex technical support at 1-800-729-3839 (option 2).

PARTS BREAKDOWN			
Item	Order Part #	Description	
1KIT	105431-1	S&R ECL-230X core assy, STD	(includes items 1A-1J)
	105431-2	S&R ECL-230X core assy, TDB, TD	
	105431-3	S&R ECL-230X core assy, H	
	105431-4	S&R ECL-230X core assy, TDB, H	
	105431-5	S&R ECL-230X , core assy, 30" SINGLE	
	105431-6	S&R ECL-230X , core assy, 30" TDB	
1A	103699-104	Screw 8-32 x 1/4 cone	
1B	103629	IKC cylinder housing	
1C	103650-1	Siren bracket assy	
	103650-2	Siren bracket assy, weatherized	
1D	PP-5377-106	Screw 8-32 x 3/8 FH	
	101950-505	Screw 8-32 x 5/16 FH, weatherized	
1E	103641-1	Endcap cover	
1F	103625	Endcap bracket	
1G	103647-1	Pushpad sign, 230X, english, red, std	
	103647-13	Pushpad sign, 230X, english, red, 30"	
1H	105432-1	S&R, ECL-230X Internal Pushpad Assy, STD	
	105432-2	S&R, ECL-230X Internal Pushpad Assy, TDB/TD	
	105432-3	S&R, ECL-230X Internal Pushpad Assy, H	
	105432-4	S&R, ECL-230X Internal Pushpad Assy, TDB, H	
1J	103629	IKC Cylinder Housing	
2	103632	Back-plate	
3	103643	Lockbody main template	
4	103687	Top & Bottom latch template	
5KIT	103693-1	Top bolt assy, standard	(includes items 5A-5G)
	103693-2	Top bolt assy, weatherized	
5A	103691	Top bolt bracket	
5B	103533	Bolt pin	
5C	103639	Top bolt	
5D	103551	Bolt clip	
5E	103652-1	Top/bottom cover	
5F	100156-104	Screw 8-32 x 1/4 FH	
	101950-505	Screw 8-32 x 5/16 FH, weatherized	
5G	103634	Top strike	



  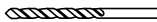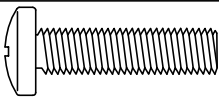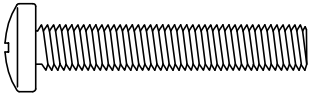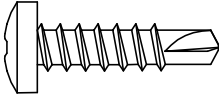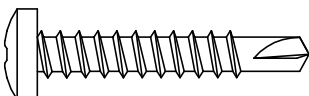
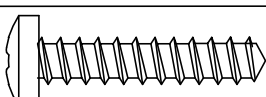


PARTS BREAKDOWN			
Item	Order Part #	Description	
6	103674	Top rod (84")	
	103073-2	Top rod assy (96")	
	103073-3	Top rod assy (120")	
7	103544	Bottom rod	
8	105435-1	Cover assy, TDB/TD	
	105435-2	Cover assy, Single point	
	105435-3	Cover assy, TDB/TD, Weather	
	105435-4	Cover assy, Single point, Weather	
	105435-5	Cover assy, TDB/TD, Hurricane	
9	105435-6	Cover assy, Single point, Hurricane	
	PP-5572	Cover lock (optional)	
10KIT	103692-1	Bottom bolt assy	(includes items 10A-10G)
	103692-2	Bottom bolt assy, weatherized	
10A	103555	Bottom bolt bracket subassy	
10B	103533	Bolt pin	
10C	103536-1	Bottom bolt	
10D	103551	Bolt clip	
10E	103652-1	Top/bottom cover	
10F	100156-104	Screw 8-32 x 1/4 FH	
	101950-505	Screw 8-32 x 5/16 FH, weatherized	
10G	103546	Bottom strike plate	
15KIT	103660-1	Strike kit, standard	(includes item 15A)
	103660-2	Strike kit, high strength	
15A	103614	Strike	
20KIT	103640-X	Hardware kit (not shown)	(includes items 20A-20C)
20A	PP-5567	9V Battery	
20B	PP-5377-106	Screw, mach, 8-32 x 3/8" PFH	
20C	103645	Rod cover cap	
25KIT	104073-1	Rod guide kit one (not shown)	
	104073-2	Rod guide kit two (not shown)	
	104073-3	Rod guide kit three (not shown)	
25A	103534	Rod guide	

Hardware Table for BASIC device mounting. Additional hardware is provided per the device configuration in kit form and is addressed on the appropriate pages as required		
Machine Screws	Fastener Part No	Drill Bit 
	P/N: 100980 1/4-20 x 1" PPH	#7 or 13/64"
	P/N: 100954 1/4-20 x 1-1/2" PPH	#7 or 13/64"
 	P/N: PP-5377-106 8-32 x 3/8" PFH OR P/N: 101950-505 8-32 x 5/16" PFH	-----
Self-drilling Screws / Wood Screws		
	P/N: 103276-63 #14 x 1" PPH	1/8 pilot hole recommended for self-drilling screws
	P/N: 103276-65 #14 x 1-1/2" PPH	1/8 pilot hole recommended for self-drilling screws
	P/N: 103993-1 #14 x 1-1/4" SMS PPH	

Socket Head Cap Screws (High strength bolts for TDB configurations)

Recommend using socket head cap screws with sex nuts.

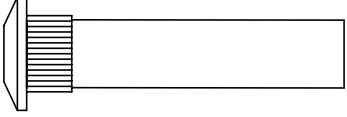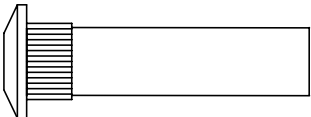HURRICANE: Sex nuts and socket head cap screws **MUST** be used with HURRICANE devices.

	P/N: 105773-7 1/4-20 x 1" 3/16 Socket HD	#7 or 13/64" for threaded hole or 9/32" for use with sex bolts
	P/N: 105773-9 1/4-20 x 1-1/2" 3/16 Socket HD	#7 or 13/64" for threaded hole or 9/32" for use with sex bolts
	Part No: 105209 (6 ea per kit) (1/4-20 x 1-3/4")	1/2 Exterior door face (With Trim)
		3/8 Exterior door face (Without Trim)
	Sex Nut 1/4-20 SS Catalog No: SN1-630 (2 ea per kit) (1/4-20 x 1-9/16")	1/2 Exterior door face (With Trim)
		3/8 Exterior door face (Without Trim)
	P/N: PP-5067-25 #14 Lockwasher	
	P/N: PP-5066-12 #12 Lockwasher	

Tools Required:

Power Drill

Level

Combination Square

Safety Glasses

Pencil

Tape Measure


Center Punch

3 /16" & 5 /32" Allen Wrenches


#2 and #3 Phillips Screw Drivers

Mullions:
 Key Removable - 90KR
 Removable - H90R
 (Approved for hurricane Installations)


SINGLE point

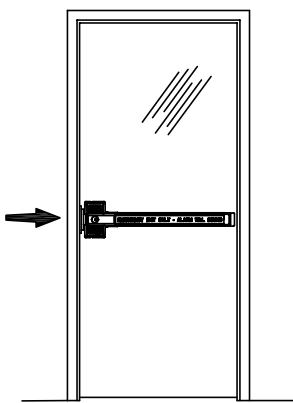

Deadbolt

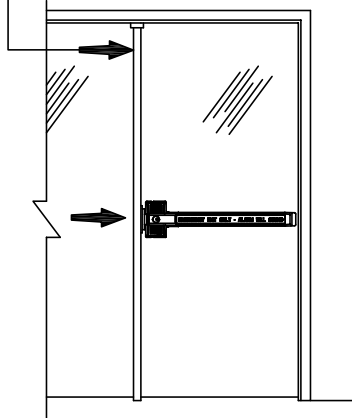


Deadbolt & Mullion

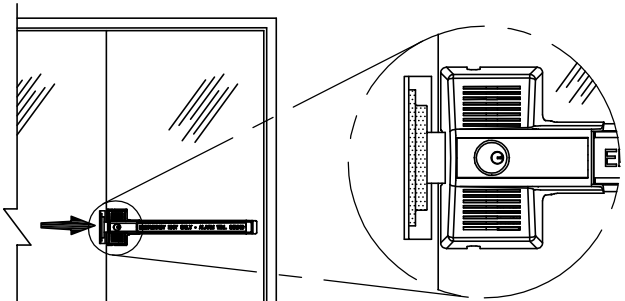


Deadbolt & Double Door
Strike Kit (p/n: DDSK)


2 point

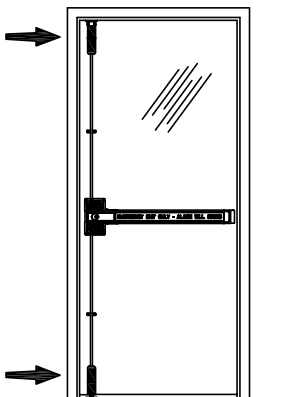


(TB) Top & Bottom Bolt

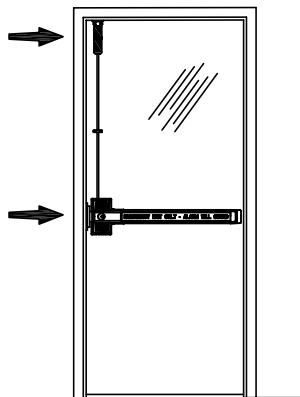

(TD) Deadbolt & Top Bolt

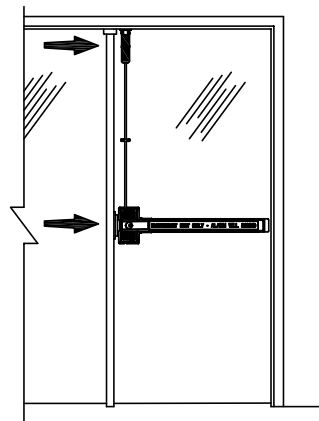


(TD) Deadbolt/Top Bolt
& Mullion

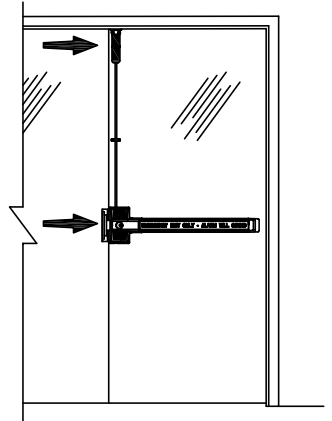


(TD) Deadbolt/Top Bolt
& Double Door
Strike Kit


3 point

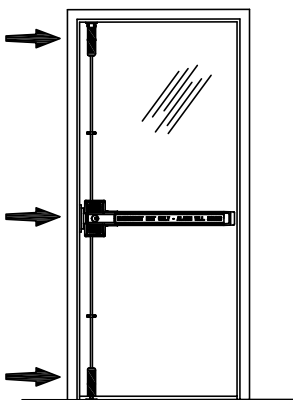

(TDB) Deadbolt,
Top & Bottom Bolt

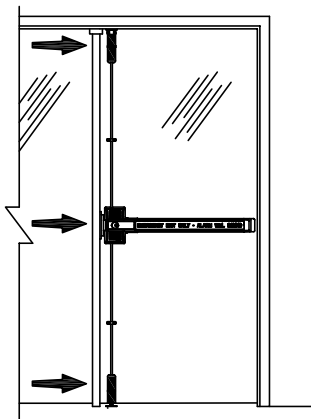


(TDB) Deadbolt, Top & Bottom
Bolt, & Mullion

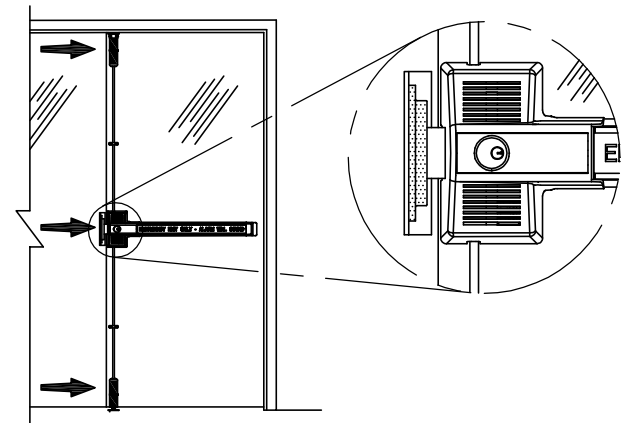

(TDB) Deadbolt, Top & Bottom Bolt,
& Double Door Strike Kit

!!!CHECK BEFORE STARTING!!!

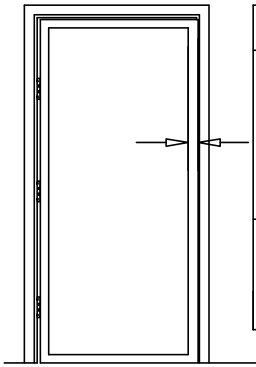

Wide Stile (Surface Strike)

Minimum door stile 6" (152 mm).
Template drawings provide door and frame structural and dimensional specifications for door and frame preparation.

Surface strike possible.
Mortise strike recommended.


 
 
Doors and frames with walls having a structural thickness (metal skin plus reinforcement, or solid wood) to engage less than (3) full screw threads, are considered unreinforced for hardware.

Unreinforced Doors: Use Sex Nuts and Bolts.


Unreinforced Frames: Use Blind Rivet Nuts (see sketch).

Fasteners for unreinforced openings are not supplied by Detex.


Reinforced door or frame engages at least (3) screw threads.

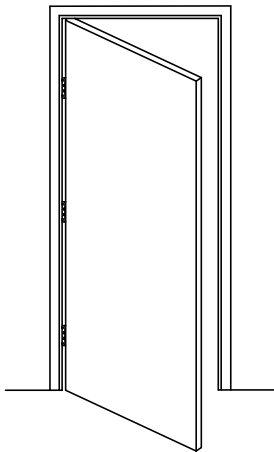


Door Must Swing Freely

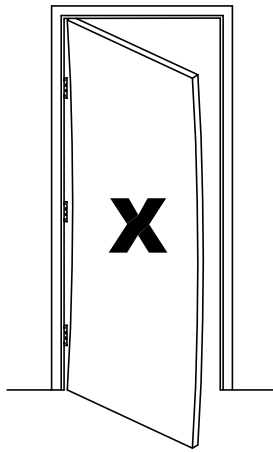

Door Must Not be Warped

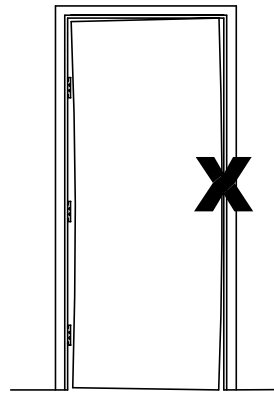


Door Must Not Bind


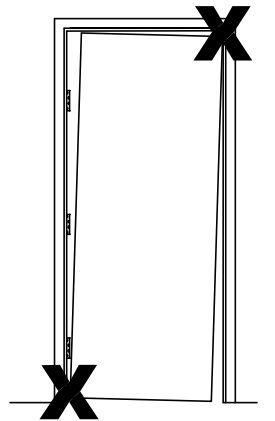


Door Must Not Sag


NO MODIFICATION OF ANY KIND, OTHER THAN THOSE DESCRIBED IN THESE INSTRUCTIONS ARE PERMITTED.

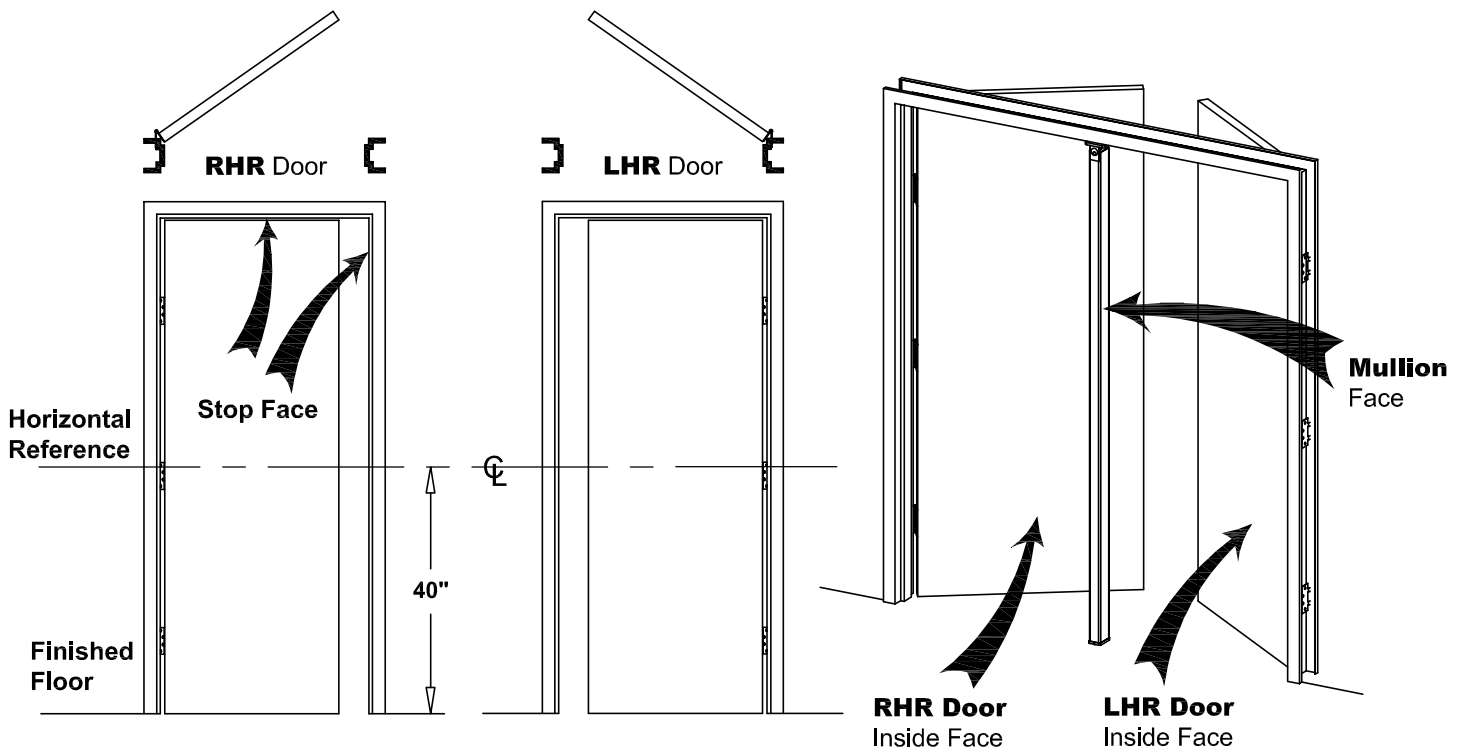

STEP 1: Use template to locate backplate and strike

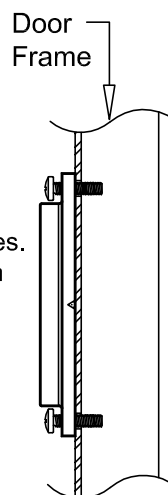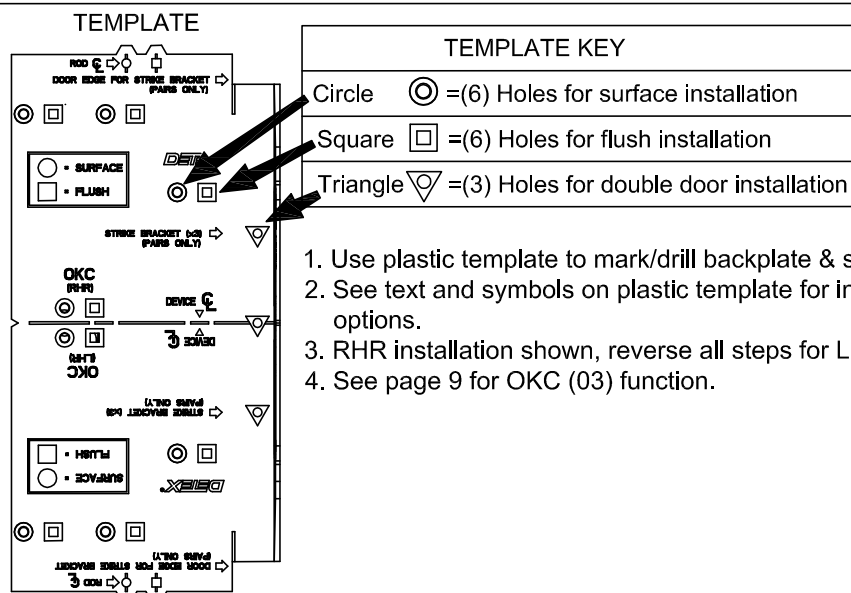

**SURFACE
INSTALLATION**


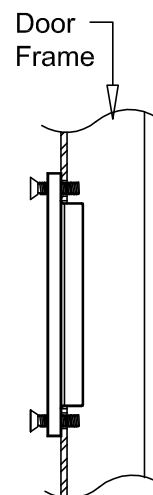


**FLUSH
INSTALLATION**

SURFACE INSTALLATION

Mark (6) back-plate
mounting holes
(Mark circles)

Mark (2) strike holes

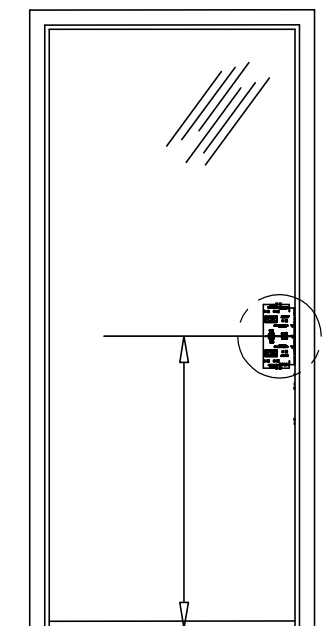
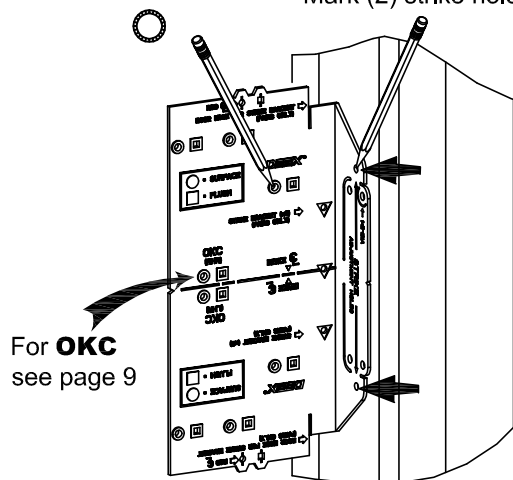


Mark centerline for device
40" from finished floor

FLUSH INSTALLATION

Mark (6) back-plate
mounting holes
(Mark squares)

Mark (2) strike holes

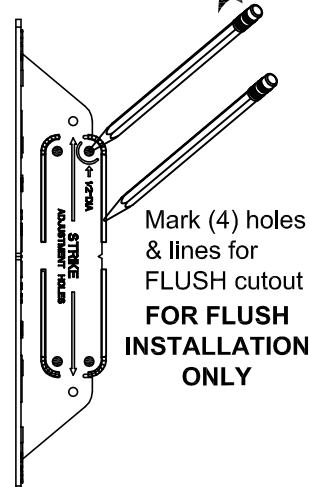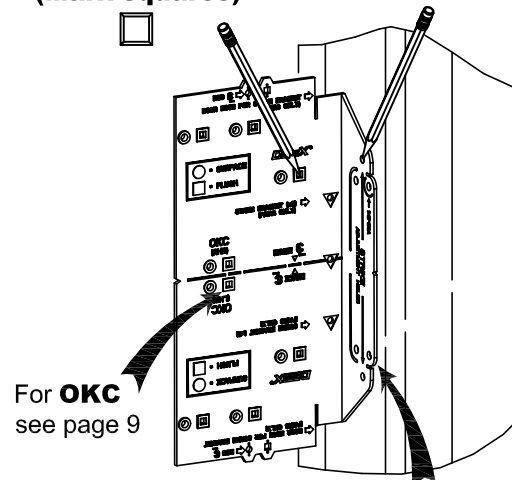

STEP 2: Drill backplate and strike holes

SURFACE & FLUSH INSTALLATIONS

BACK-PLATE HOLES

6 places for 1/4-20 machine screws (#7 or 13/64")

OR

#14 self-drilling screws (1/8 pilot hole)

OR


1/4-20 machine screws used with sex bolts (9/32")

NOTE: Sex nuts & socket head cap screws MUST be used with HURRICANE devices.

See OUTSIDE KEY CONTROL (page 9) for transferring hole locations from DEVICE side to TRIM side.

OR

See OUTSIDE KEY CONTROL INSTALLATION for TRIM option

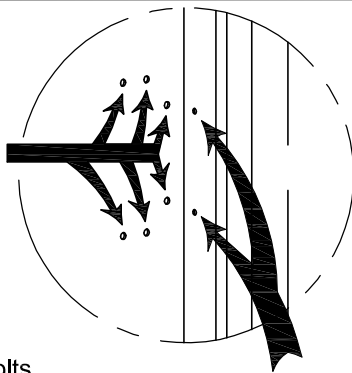

STRIKE HOLES

2 places for 1/4-20 machine screws (#7 or 13/64")


OR

#14 self-drilling screws (1/8 pilot hole)

FOR FLUSH INSTALLATION ONLY


Remove outlined area

Drill (4) 1/2" diameter holes

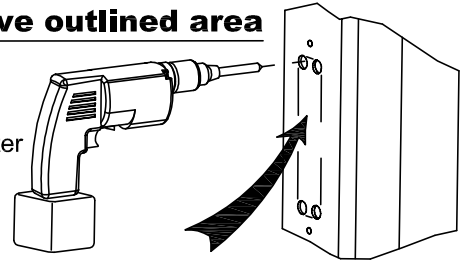

Drill 4 marked locations & remove marked rectangular area



Finished FLUSH cutout

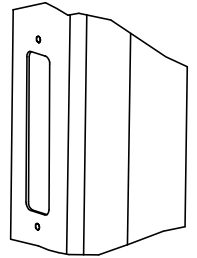


STEP 3: Install back-plate

See OKC steps, pg 9

Sex nuts and socket head cap screws **MUST** be used with HURRICANE devices

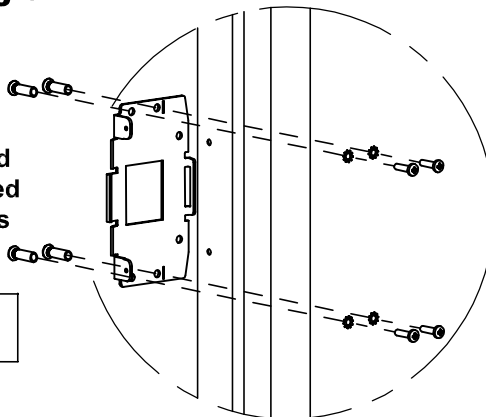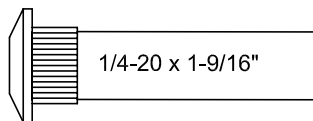

Install with (4) lockwashers & screws or screws & sex bolts

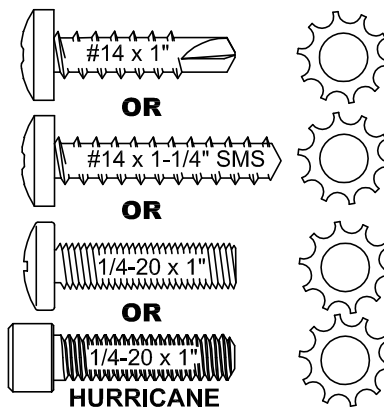

STOP: IF PULL OR TRIM NOT ORDERED, CONTINUE ON TO STEP 4.

Inside PULL, OKC, PULL or TRIM PLATE must be installed before installing device.





1. Inside Pull.....pg 8 (below)
2. Outside Key Control...pg 9
3. Pull and Trim Plate.....pg 10

INSIDE PULL KIT (IP KIT) (OPTIONAL) (must be installed before installing device)

ALIGN pull with back-plate tab.


MARK and **DRILL** holes.

INSTALL pull with (4) countersink washers & flat head screws

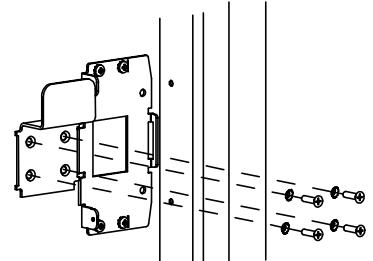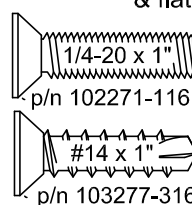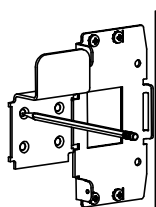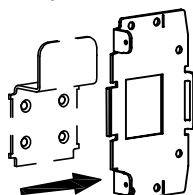


Outside Key Control Installation, if required


SURFACE INSTALLATION

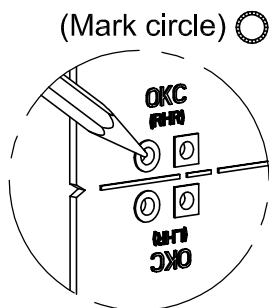

DEVICE SIDE

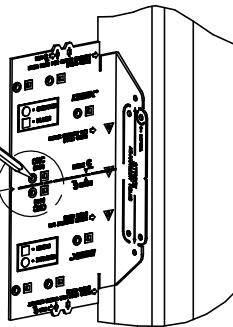





FLUSH INSTALLATION

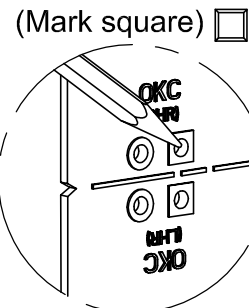

Align template with device centerline and mark/drill appropriate OKC hole through door (RHR Shown)

Transfer hole locations from DEVICE side to TRIM side


Draw horizontal lines
from DEVICE side
toward TRIM side
of door

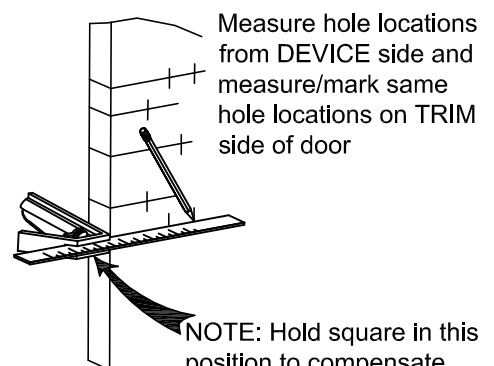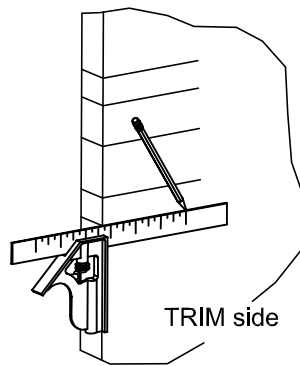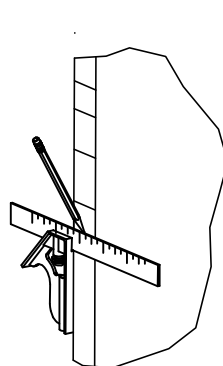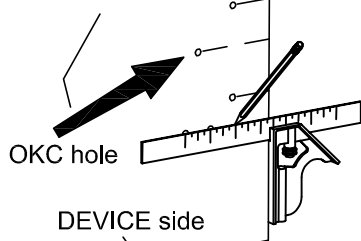

See pg 21 for outside Trim TEMPLATE

NOTE: Hold square in this position to compensate for bevel on door edge


OKC option shown

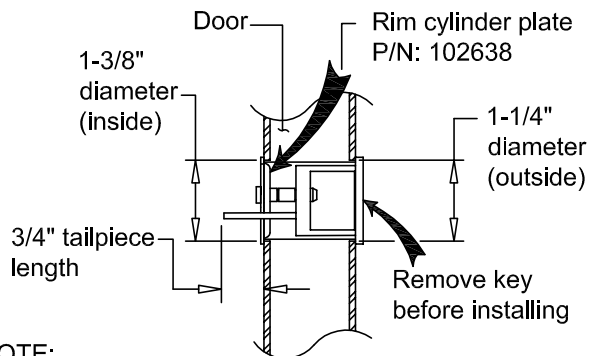

NOTE:

1. Rim Cylinder not included
2. Collar available: P/N: ECL-1595



TRIM PLATE option shown

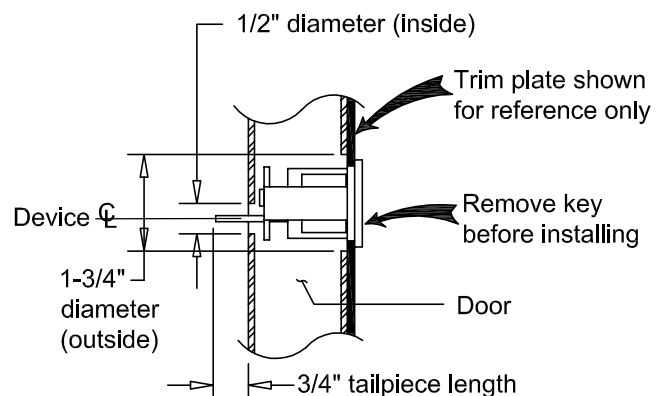

Remove OKC lockplate on device only if OKC is being installed

REQUIRED!

Remove screw and
lockplate on back of
center-case for OKC

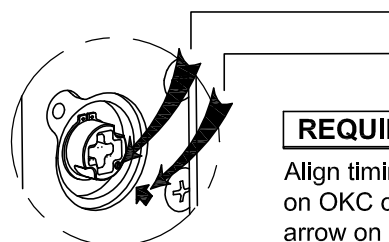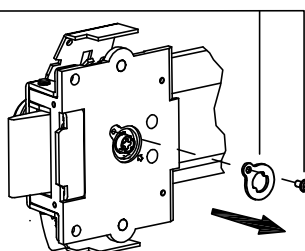

REQUIRED!


Align timing mark
on OKC cam to
arrow on lockbody

PULL PLATE and TRIM PLATE OUTSIDE INSTALLATION

- ① **DRILL** (2) 3/8" holes through plate at indentations for HURRICANE INSTALLATIONS.

These holes are also recommended on Fire Rated Wood and Unreinforced Hollow Metal Doors.



DRILL holes for HURRICANE

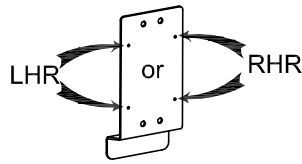



Sex Nut p/n: 105209
(6 ea per kit)

PREP door for SEX NUTS:
DRILL 9/32" hole through
INTERIOR door face.
DRILL 1/2" hole through
EXTERIOR door face.

- ② **PRESS** sex nuts into PULL or TRIM PLATE
(Pull plate shown)

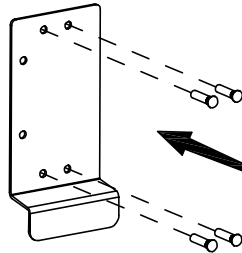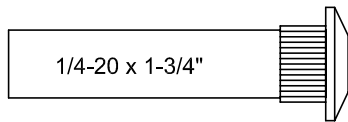


OR

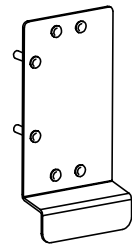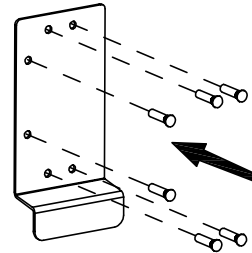


HURRICANE shown

Cylinder collars can be used where needed

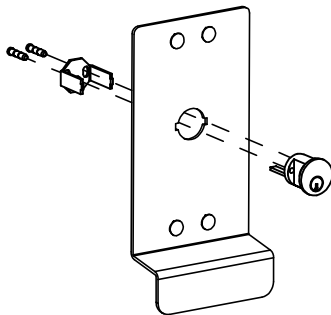


PULL PLATE shown with
cylinder option

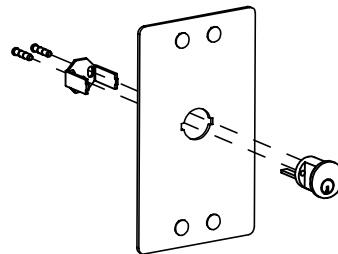


TRIM PLATE shown with
cylinder option

 - ③ **INSTALL** with lockwashers & screws








HURRICANE:
Sex nuts and socket head cap screws
MUST be used with HURRICANE
devices.

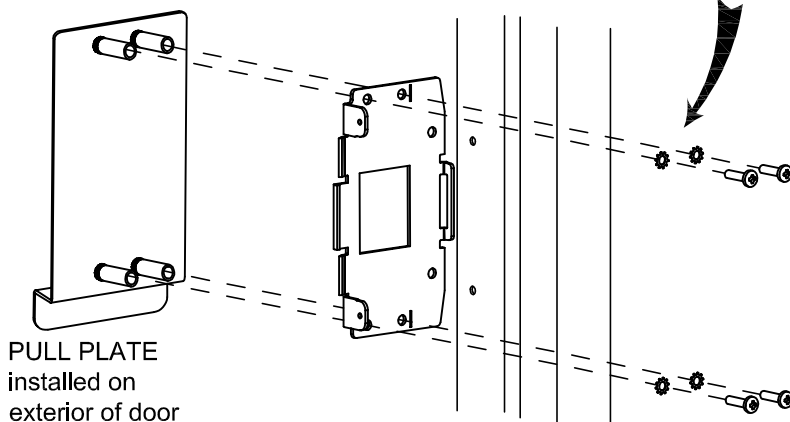



PULL PLATE
installed on
exterior of door

STEP 4: INSTALL DEVICE

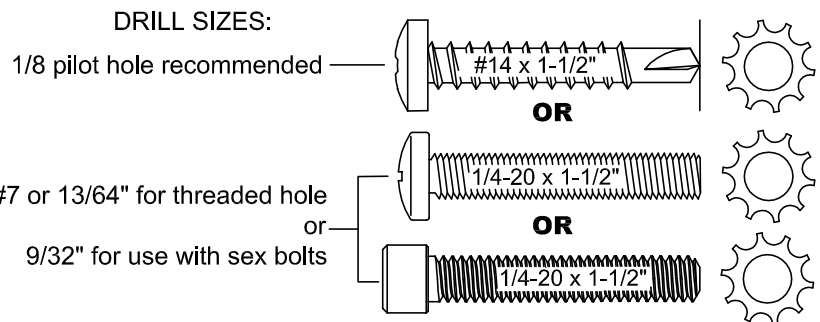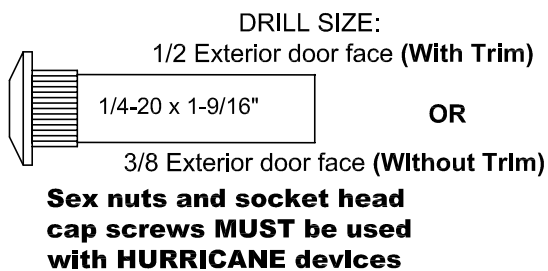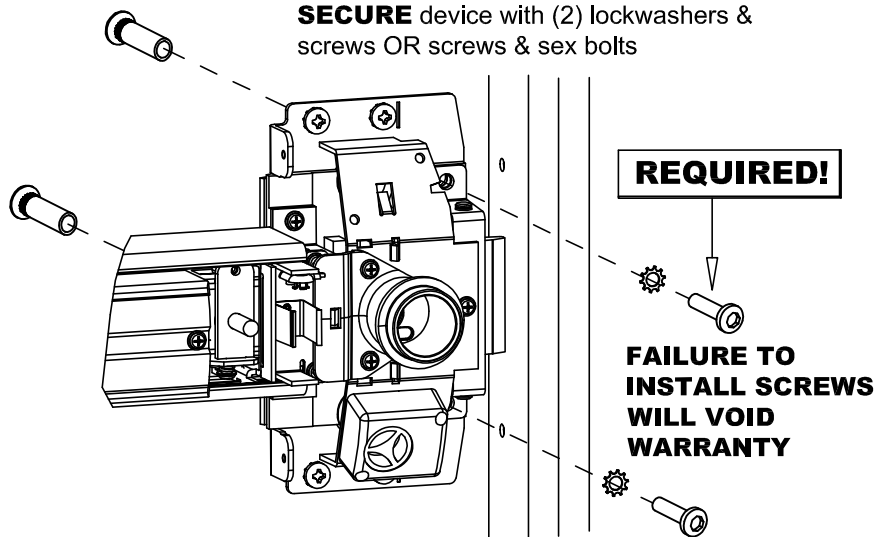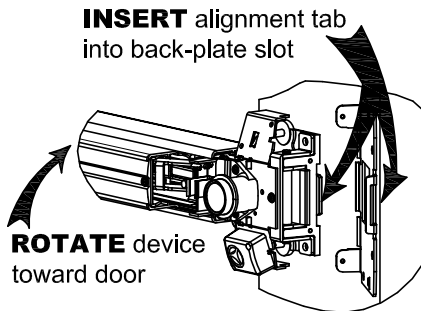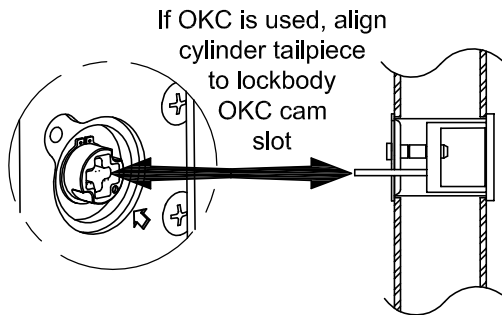

STEP 5: INSTALL ENDCAP


Sex nuts and socket head cap screws MUST be used with HURRICANE devices

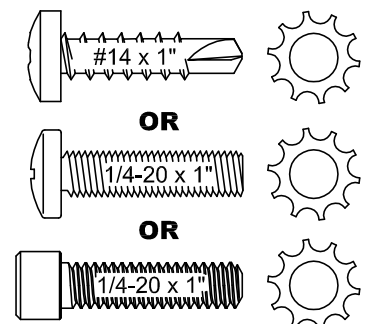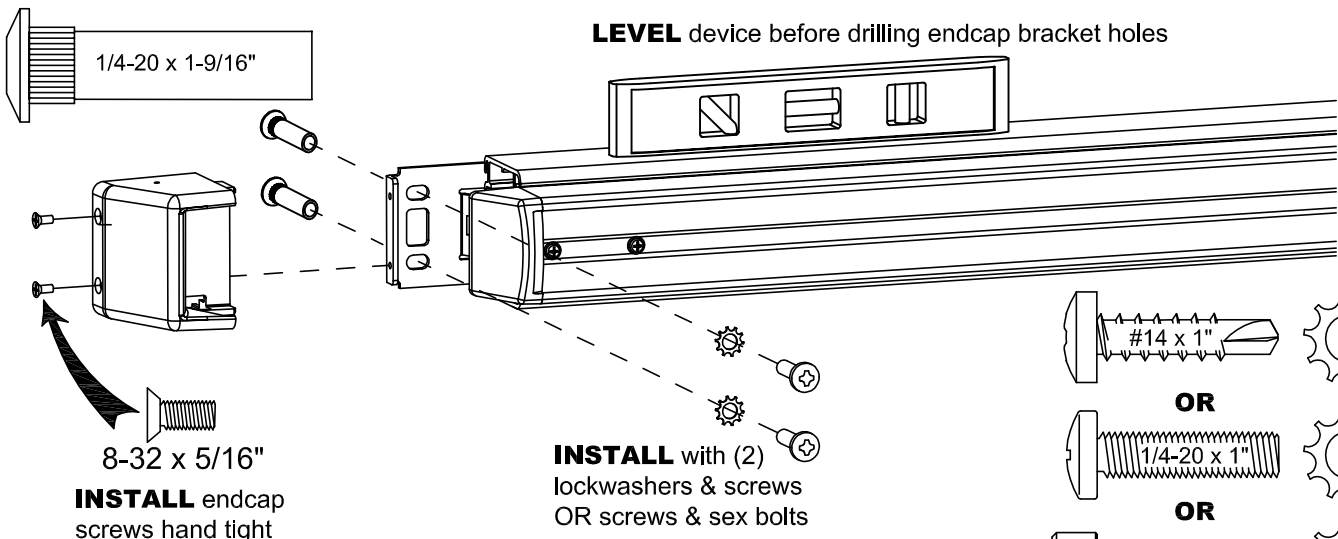


STEP 6: INSTALL RIM CYLINDER

NOTE:

1. Rim cylinder NOT included.
2. REMOVE cylinder housing from device, then install rim cylinder.
3. REMOVE key before installing cylinder.

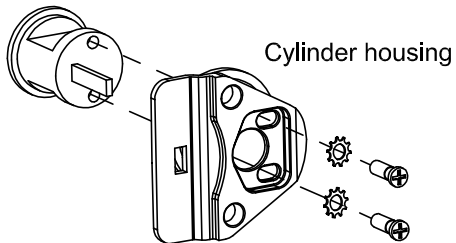


Cylinder housing

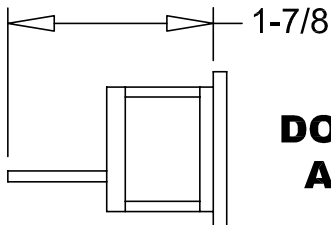

**DO NOT USE
A COLLAR**

REQUIRED!


ALIGN arrow on bracket
with timing mark on
IKC cam

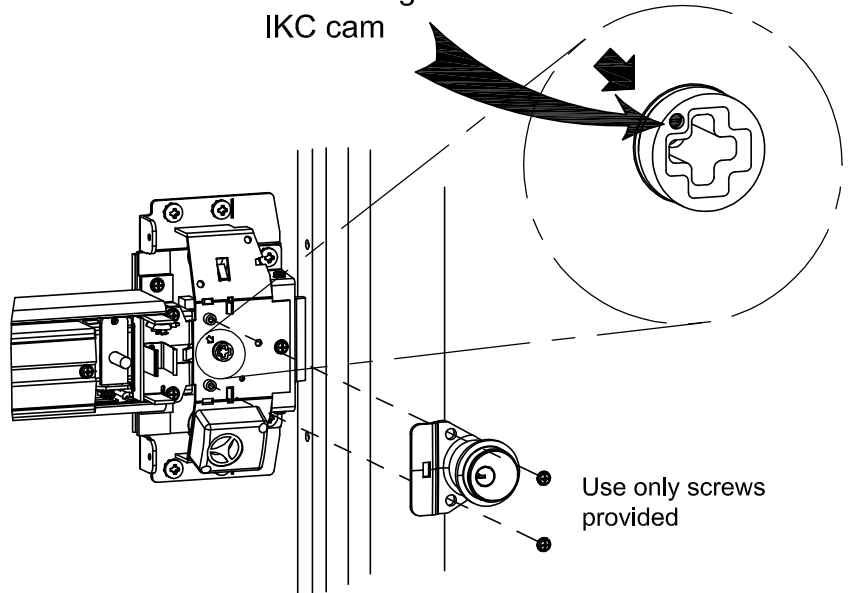


Use only screws
provided

STEP 7: INSTALL SIGN

Peel and remove tape backing
BEFORE installing sign

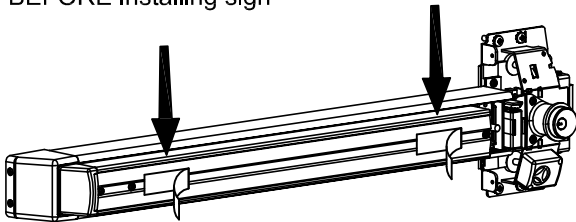

INSERT sign edge into bottom of push-pad and snap into
top of push-pad. Slide hand along top edge
of push-pad to fully seat sign


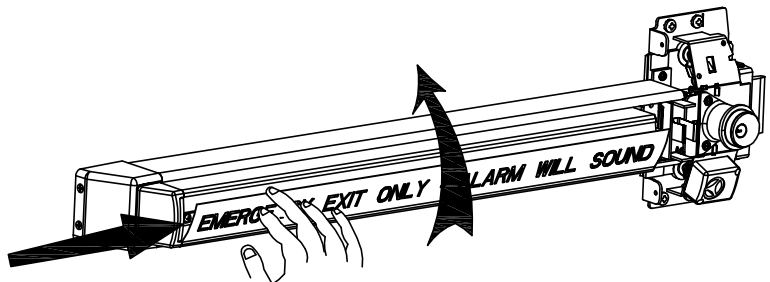



Edge of sign should be flush
with edge of push-pad endcap

NOTE: A screwdriver handle, pen, or other small blunt tool
can be used to snap/press the sign in.



STEP 8: Install Deadbolt Strike - All hardware shown on this page is supplied in the strike kit p/n 103660

SURFACE INSTALLATION

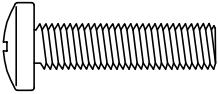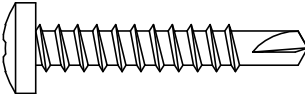Screw	Fastener Part No.	Drill Bit
	P/N: 100980 1/4-20 x 1" PPH	#7 or 13/64"
	P/N: 103276-65 #14 x 1-1/2" PPH	1/8 pilot hole recommended for self-drilling screws
	P/N: 105773-7 1/4-20 x 1" 3/16 Socket HD	#7 or 13/64" for threaded hole or 9/32" for use with sex bolts

Fasten strike loosely with (2) of the screws shown above

NOTE: Arrows on strike indicate strike orientation

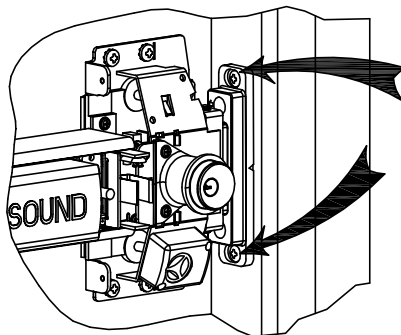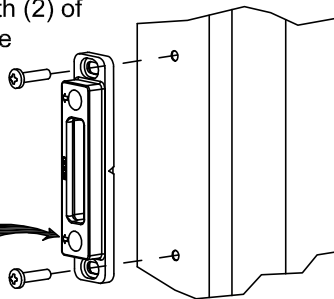

Adjust strike


Adjust strike to desired fit.
Tighten screws.

Install two (2) inner screws


REQUIRED!

Complete strike installation with (2) of the screws shown above




Mark (2) remaining holes

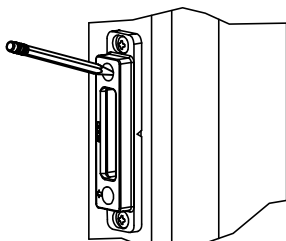



Install (2) screws

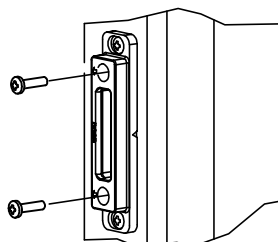

FLUSH INSTALLATION

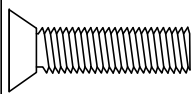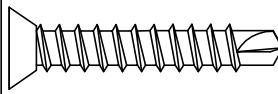Screw	Fastener Part No.	Drill Bit
	P/N: 102271-116 1/4-20 x 1" PFH	#7 or 13/64"
	P/N: 103277-324 #14 x 1-1/2" PFH	1/8 pilot hole recommended for self-drilling screws
	P/N: 105774-5 1/4-20 x 1" 5/32 Socket HD	#7 or 13/64"

Fasten strike loosely with (2) of the screws shown above

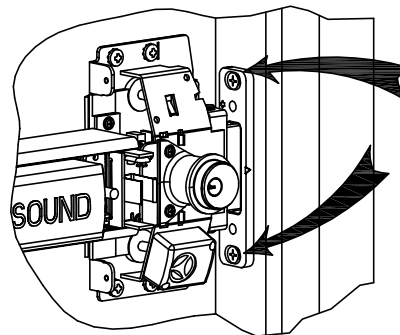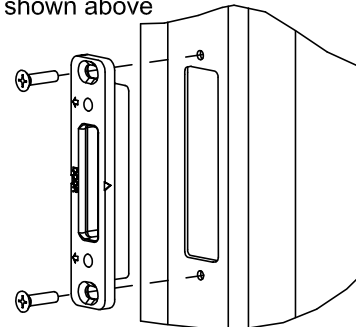

Adjust strike



Adjust strike to desired fit.
Tighten screws.

2-POINT and 3-POINT INSTALLATION (Top)

Mark & drill top strike and top bolt holes

SURFACE INSTALLATION

FLUSH INSTALLATION

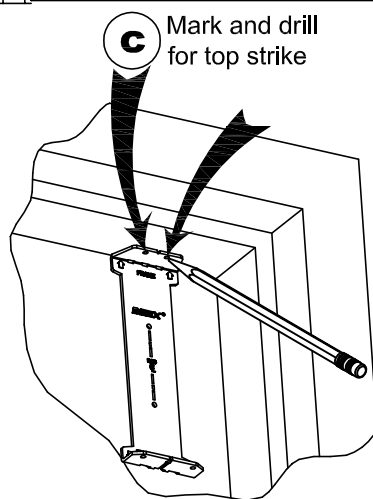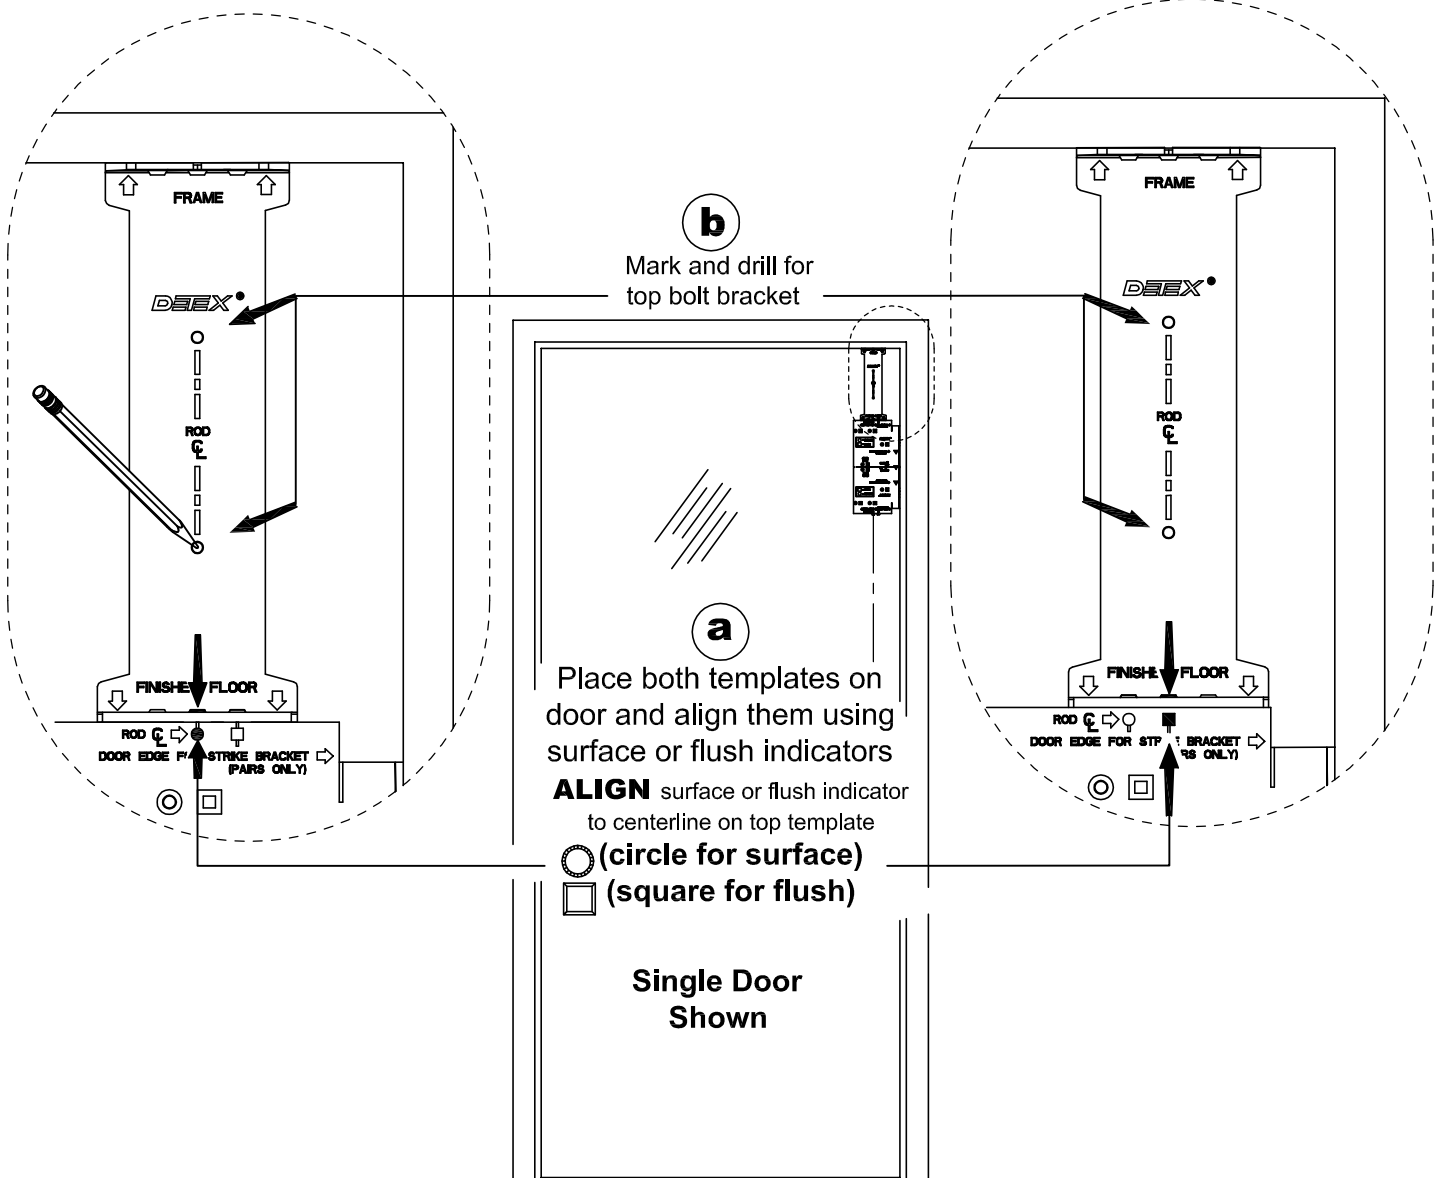

Drill #7 for 1/4-20 machine screws,
OR
Drill 1/8 for #14 self-drilling screws

2-POINT and 3-POINT INSTALLATION (Bottom)

Mark & drill bottom strike and bottom bolt holes

SURFACE INSTALLATION


FLUSH INSTALLATION

d

Place both templates on door and align them using surface or flush indicators


ALIGN surface or flush indicator to centerline on bottom template

○ (circle for surface)
□ (square for flush)

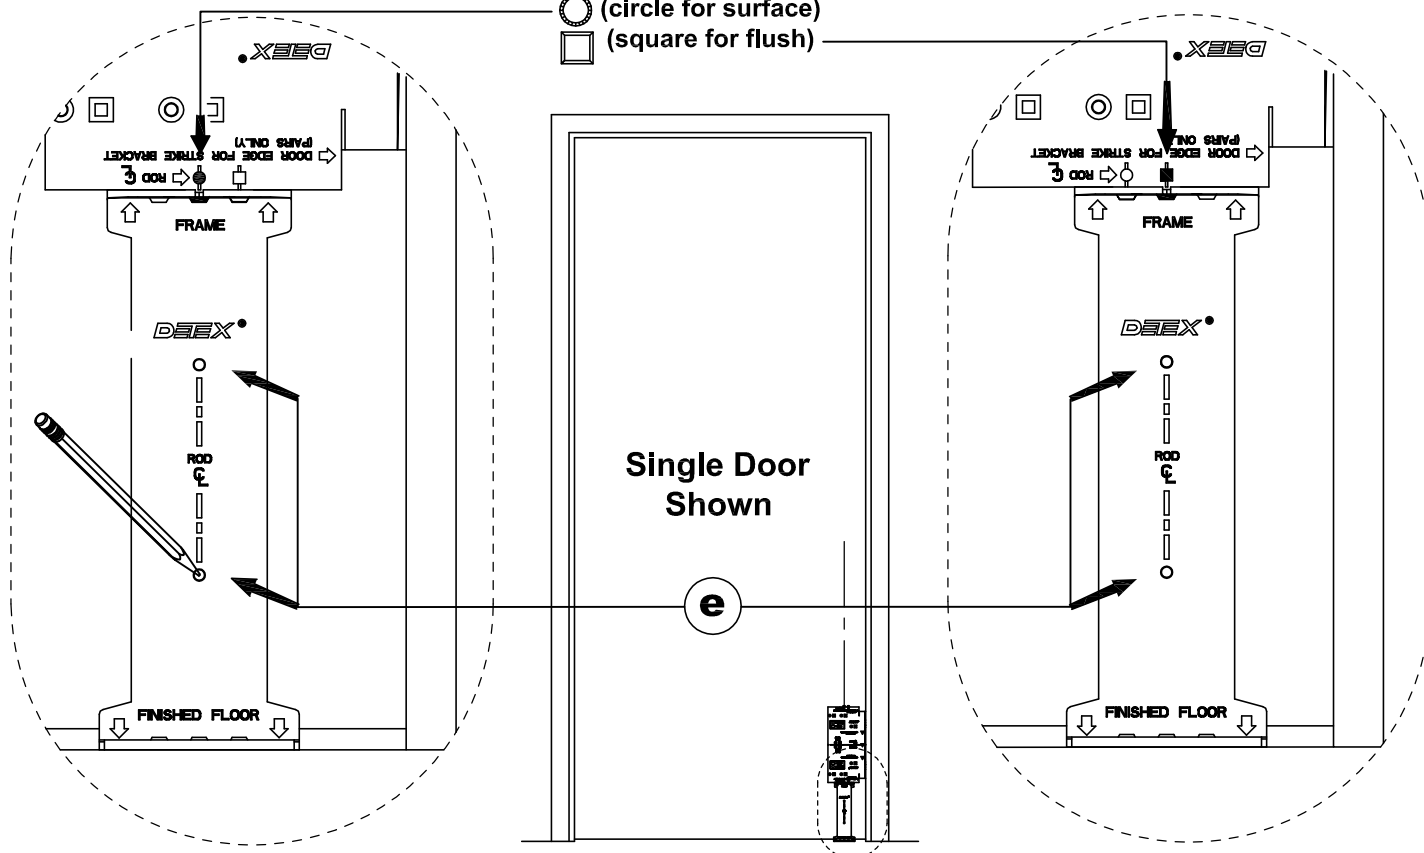

Mark and drill for bottom strike





f

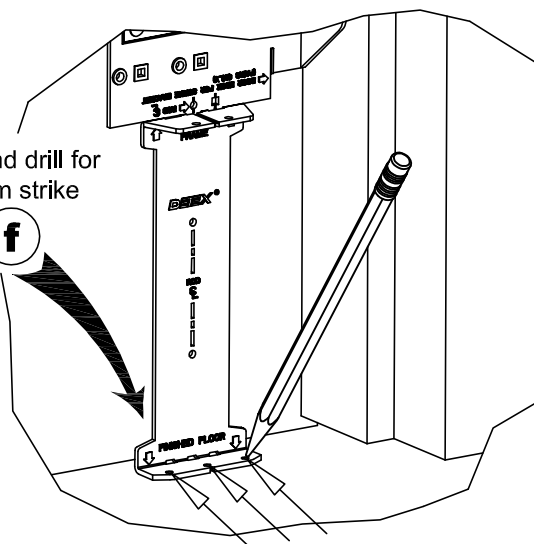


TOP STRIKE and TOP BOLT INSTALLATION

NOTE: The top bracket, top bolt and cover are shipped as a unit. Remove cover to access parts.

  All hardware shown on this page except the Sex Nuts are supplied in the Top Bolt kit p/n 103693, 103693-1 or 103693-2

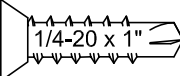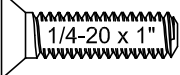Screw	Fastener Part No.	Drill Bit
	P/N: 103277-316 #14 x 1" PFH	1/8 pilot hole recommended for self-drilling screws
	P/N: 105774-5 1/4-20 x 1" 5/32 Socket HD	#7 or 13/64"
	P/N: 101950-505 8-32 x 5/16" PFH	Used to attach cover to top bolt in later step
	P/N: 100156-104 8-32 x 1/4" PFH	


STEP A: Install top strike

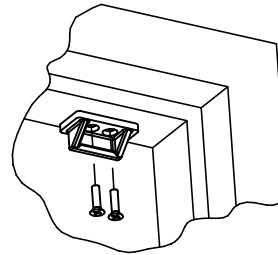


Install top strike
with (2) screws

NOTE: SOCKET HEAD
screws must be used for
HURRICANE devices

STEP B: Install top bolt bracket & top rod

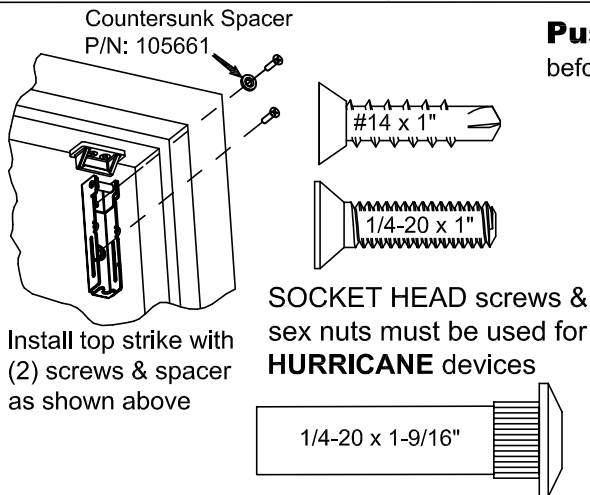


Push in Pushpad
before installing top rod

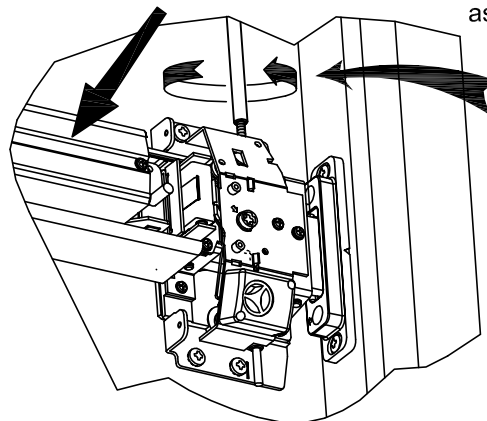

Screw top rod onto threaded rod
7 full turns minimum, then adjust
as needed

CAUTION: With top
bolt extended, end of
rod **MUST NOT** be
visible when cover is
installed
(cover not shown)

STEP C: Install top bolt

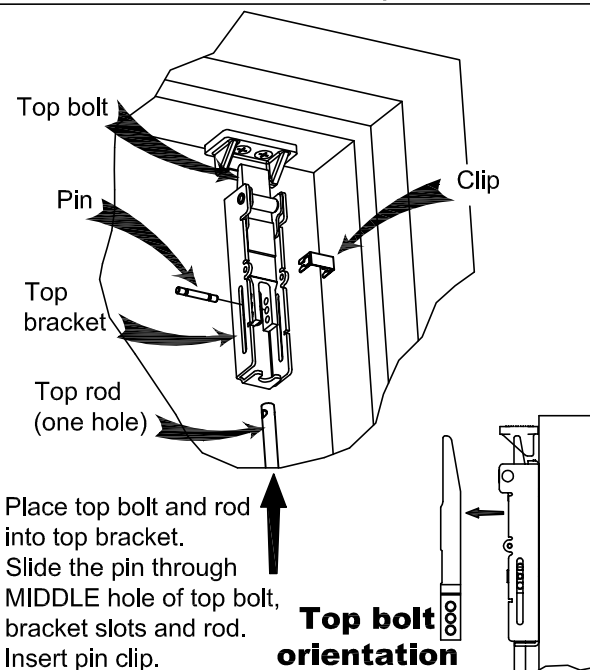

STEP D: Top bolt adjustment

See page 22 for cutting top rod

COURSE ADJUSTMENT:

Adjust strike engagement
by using different holes
in bolt.

FINE ADJUSTMENT:


Use thread on top rod
to obtain fine adjustment.
1 thread turn =
Approximate .050 inches

**SEE PAGE 21 for TESTING
and ADJUSTMENT**

BOTTOM STRIKE and BOTTOM BOLT INSTALLATION

NOTE: The bottom bracket, bottom bolt and cover are shipped as a unit. Remove cover to access parts.


STEP E: Install bottom strike

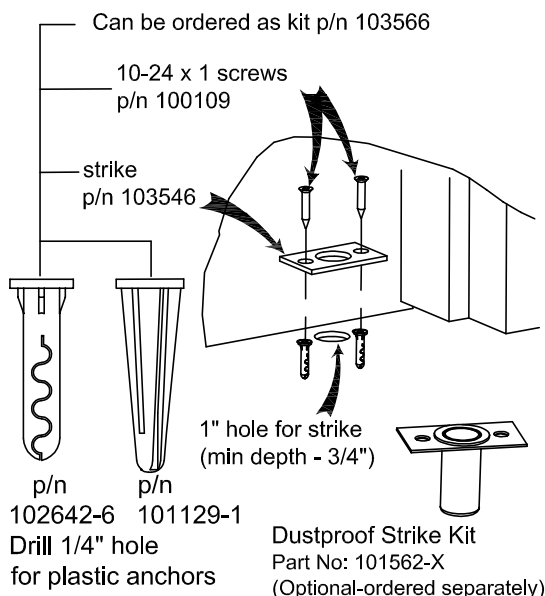


STEP F: Install bottom bolt bracket

Hardware included in Bottom Bolt kit (p/n 103693-x)

Screw	Fastener Part No.	Drill Bit
	P/N: 103276-65 #14 x 1-1/2" PPH	1/8 pilot hole recommended for self-drilling screws
	P/N: 100980 1/4-20 x 1" PPH	#7 or 13/64" for threaded hole or 9/32" for use with sex bolts
	P/N: 105773-7 1/4-20 x 1" 3/16 Socket HD	

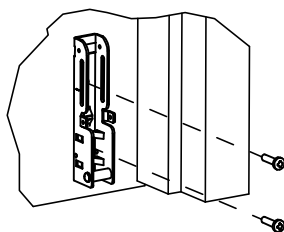

Install bottom bolt
bracket with
(2) screws

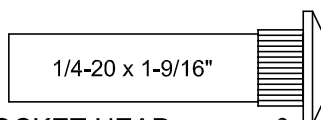


SOCKET HEAD screws &
sex nuts must be used for
HURRICANE devices

Sex nuts sold separately

STEP G: Install bottom rod

Push in Pushpad
before installing bottom rod

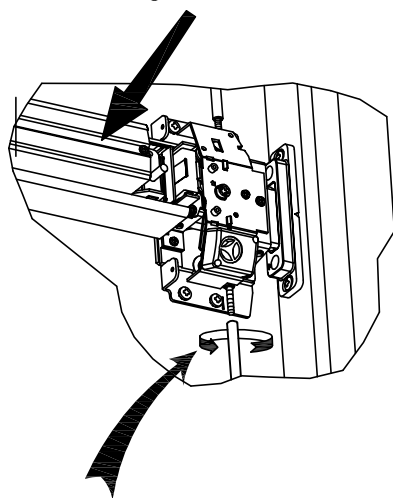


Screw bottom rod onto threaded rod
7 full turns minimum, then adjust
as needed


**CAUTION: With bottom
bolt extended, end of
rod MUST NOT be
visible when cover is
installed
(cover not shown)**

STEP H: Install bottom bolt

Place bottom bolt and rod into bracket.
Slide the pin through bracket slots,
bolt, and rod hole. Insert pin clip.

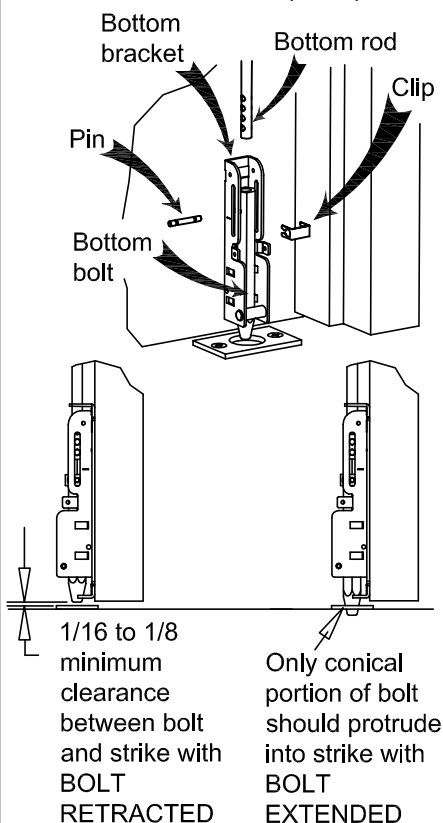

STEP I: Bottom Bolt Adjustment

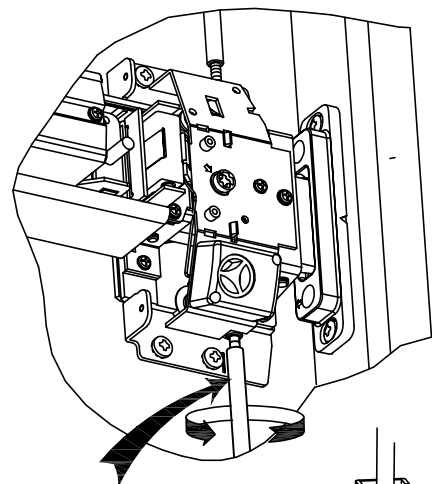



FINE ADJUSTMENT:
Use thread on bottom rod
to obtain fine adjustment.
1 thread turn =
Approximate .050 inches

COURSE ADJUSTMENT:
Adjust strike engagement
by using different holes
in rod.

**SEE PAGE 21 for
TESTING and ADJUSTMENT**

TOP and BOTTOM COVER INSTALLATION & ROD GUIDES

Install top cover
with screws provided
in Top Bolt kit

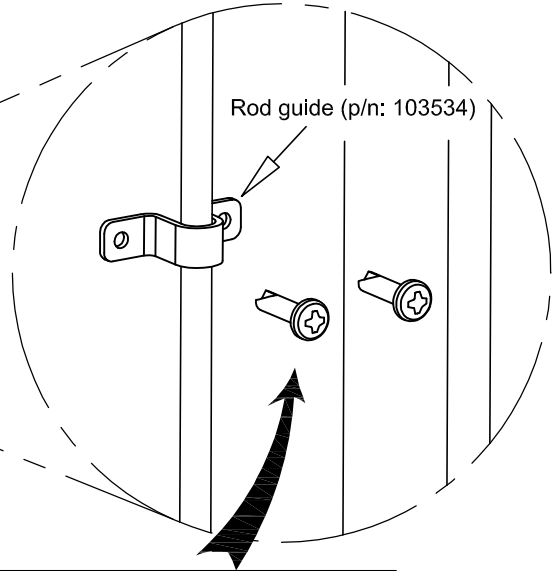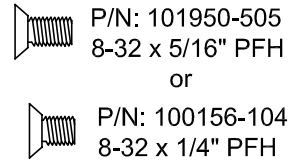

V50 ROD GUIDE KIT (p/n: 104073)	
	P/N: 103276-41 #10 x 1" PPH
	P/N: PP-5183-68 #10 x 1" SMS PPH


NOTE: 1/16 pilot hole recommended

Space 1 rod guide equal distance between centercase and bolt assemblies (7 foot and 8 foot doors). Use 2 rod guides spaced evenly on the top rod of 10 foot doors.


NOTE:

1. If metal bottom bolt guard is to be used, do not attach the plastic bottom bolt cover (refer to bottom bolt guard installation instructions).
2. If rod covers are to be used, do not install rod guides (refer to rod cover installation instructions).


Install bottom cover
with screws provided
in Bottom Bolt kit

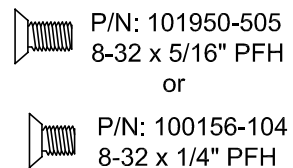

DEADBOLT AND TOP BOLT INSTALLATION (TD)

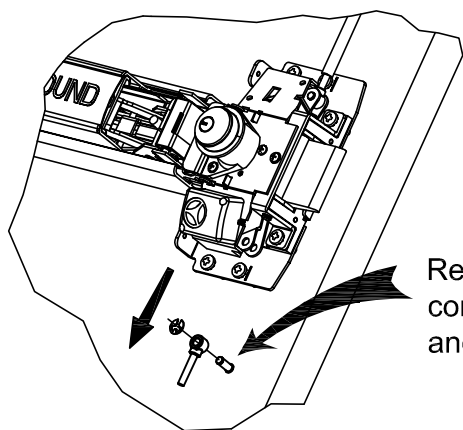

Remove bottom rod, connector, pin, and e-clip

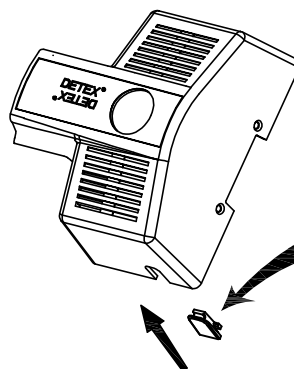


Tap the Rod Cover Cap into place


Install Battery and Cover

Before installing battery, RETRACT bolt with key


Connect 9V battery

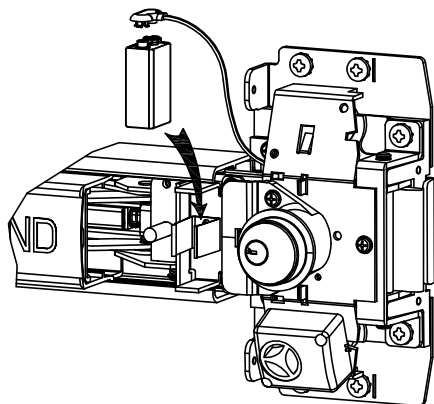


Before installing cover, retract bolt with key

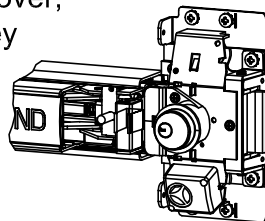

Rotate slightly over retracted bolt while installing cover

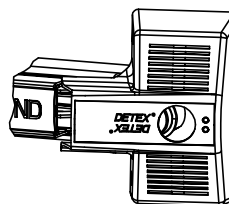


Install cover

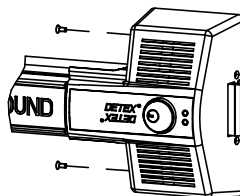

8-32 x 3/8" PFH

4 cover screws if optional cover lock not ordered

OPTIONAL cover lock


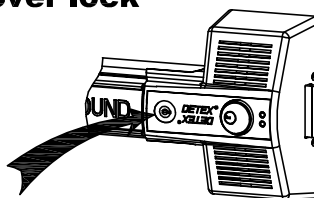


8-32 x 3/8" PFH

2 cover screws if optional cover lock is ordered

Optional cover lock: (If ordered)
Turn cover lock key 4 to 5 turns (CW) to fasten cover


DOUBLE DOOR INSTALLATION

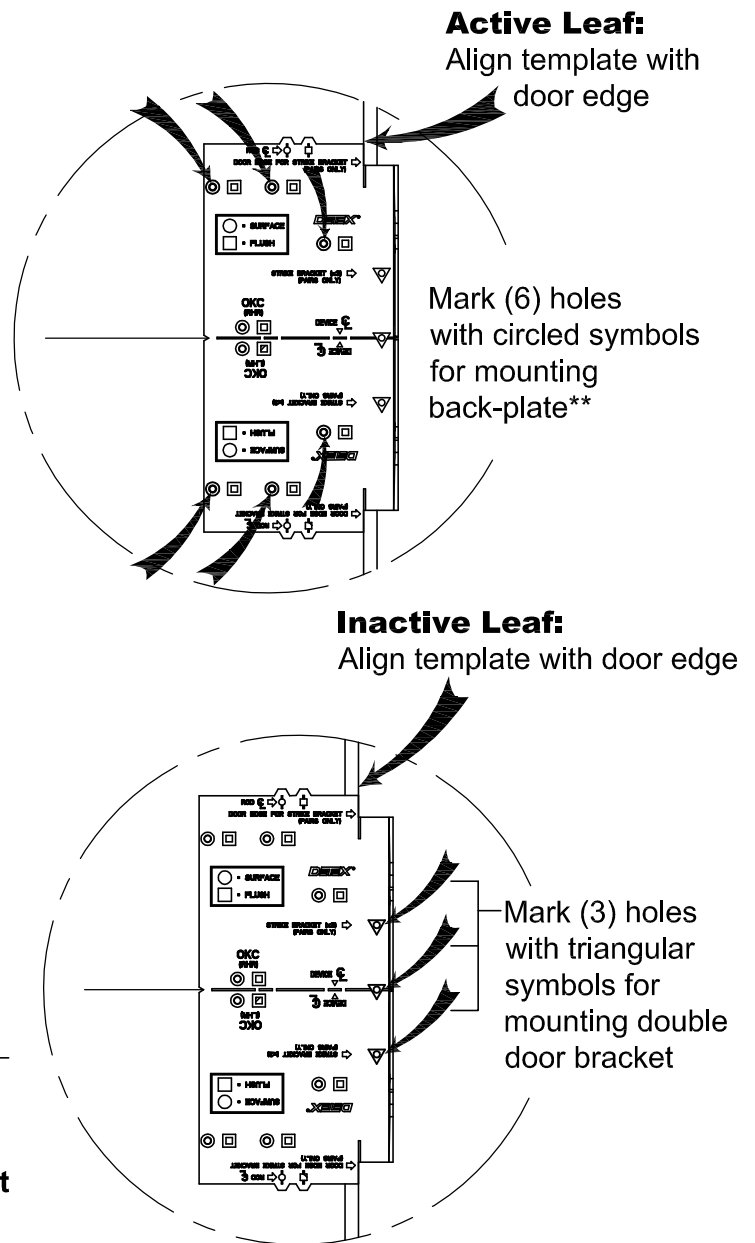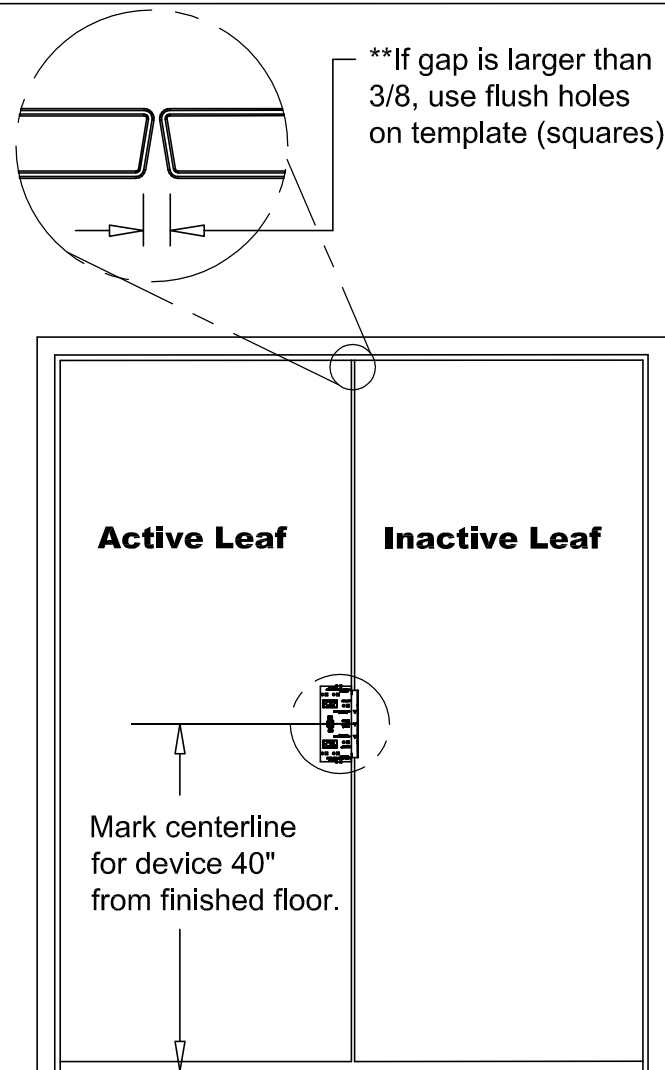

OPTIONAL: Double door strike kit

P/N: DDSK

Bracket
p/n 103683

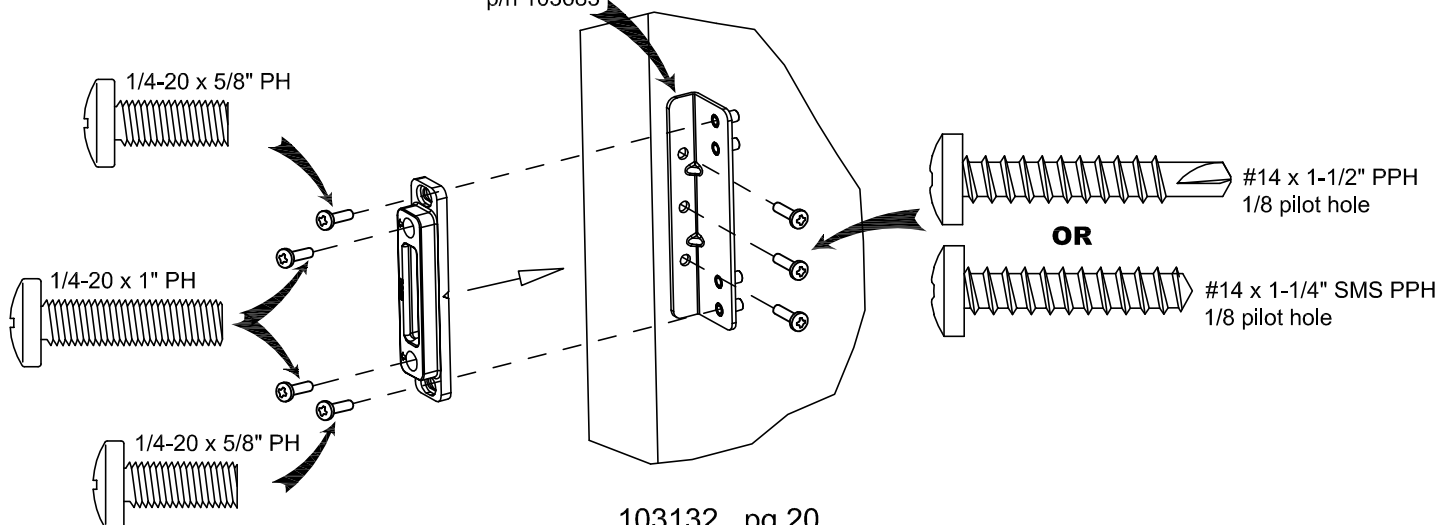

Operations: Turn the cylinder key 360 degrees clockwise (CW) to arm the device and lock the door. With the door locked, pushing the bar will unlock the door and sound the alarm. Turn the cylinder key 360 degrees clockwise (CW) to turn off the alarm, lock the door and arm the device.

Unlocking door with key: Turn the key 360 degrees counterclockwise (CCW) to unlock the door without setting off the siren.

Note: 360 degrees is the cylinder requirement, do not exceed. DO NOT turn past the HOME POSITION.

Troubleshooting:

1. How to remove cover

- a) Remove cover by unfastening four screws. If a cover lock is provided with cover, insert the cover lock key and turn it counter-clockwise approximately 4-5 complete turns in addition to removing 2 screws in front of cover.

2. Trouble installing cover:

- a) No cylinder collar is needed and will cause problems installing cover, remove collar.
- b) The cover needs to rotate slightly over the dead bolt.

3. Siren does not sound:

- a) Confirm the 9V battery voltage is good.
- b) Confirm the battery connector and wires are ok.
- c) Remove siren bracket assembly - Check micro-switches - With both switches open, the siren should sound.
- d) For a quick test to check siren, a 9V battery can be connected straight to the red (+) and black (-) wires on the siren.

4. Key control cylinder (IKC) - Hard to turn (Binding), does not turn:

- a) Verify the tailpiece is the right length and not bottoming out.
- b) Verify the cylinder cam is timed correctly, see page 12, step 6
- c) Verify the dead bolt or rod bolts are not bottoming out or rubbing on the strike.
- d) Push bar in and release, the bar should spring back out.
- e) Make sure the device back-plate and end mounting bracket are on the same level surface.
- f) Confirm two screws are installed to secure locking mechanism to door, see page 11, step 4.

Two point locking

- g) Confirm bottom rod connector was removed, see page 19.

5. The unit sounds when the dead bolt is extended:

- a) Verify the cylinder cam is timed correctly, see page 12, step 6.
- b) Verify the dead bolt or rod bolts are not bottoming out or rubbing on the strike.

6. The alarm does not reset:

- a) Turn the key 360 degrees clockwise.

7. The rod adjustments can cause malfunction of the product.

- a) If the multi-point device is malfunctioning, remove one rod at a time and recheck operations. See rod adjustment operations on page 16 and 17

Call DETEX Technical Support at 1-800-729-3839

Testing and Adjustment:

Testing: (TOP BOLT)

1. Close the door; turn key (CW) to lock door; bolt should project into the strike cavity and lock securely.
2. Push on the push-pad to open the door. The top bolt should retract from the strike and clear by 1/16" to 1/8".
Bolt should remain retracted.
3. Close the door; turn key (CW) to lock door. Bolt should project into strike cavity.

Adjustment: (TOP BOLT) - Adjust bolt engagement by using holes in top bolt:

1. If top bolt hits edge of strike when door is opened:
Remove clip and pin, move bolt down and insert pin in next lower bolt hole. Insert clip and pin. Test door for bolt clearance.
2. If top bolt does not engage strike:
Remove clip and pin, move bolt up and insert pin in next upper bolt hole. Insert clip and pin. Test door for bolt engagement.

NOTE: Fine adjustment can be obtained by using thread on bottom rod (1 thread turn = Approx .050 inches)

Testing: (BOTTOM BOLT)

1. Close the door; turn key (CW) to lock door; bottom bolt should drop into the strike with door closed.
2. Push on the push-pad to open the door. The bottom bolt should retract from the strike and clear by 1/16" to 1/8".
Bolt should remain retracted.
3. Close the door; turn key (CW) to lock door. Bolt should drop into strike.

Adjustment: (BOTTOM BOLT) - Adjust bolt engagement by using holes in rod:

1. If bottom bolt drags on the floor or hits edge of strike:
Remove clip and pin, move bolt up and insert pin in next upper rod hole. Insert clip and pin. Test door for bolt clearance.
2. If bottom bolt does not engage strike:
Remove clip and pin, move bolt down and insert pin in next lower rod hole. Insert clip and pin. Test door for bolt engagement.


NOTE: Fine adjustment can be obtained by using thread on bottom rod (1 thread turn = Approx .050 inches)

Cutting Top Rod (For non-standard doors)

Top rod may require cutting if centerline of device is over 40" from finished floor, or if a non-standard frame is used.


To determine top rod length: Measure the distance from the bottom edge of top bolt bracket to the top edge of backplate (XXXX). Add 2-7/8" for the rod length.

DRILL HOLE AFTER CUTTING

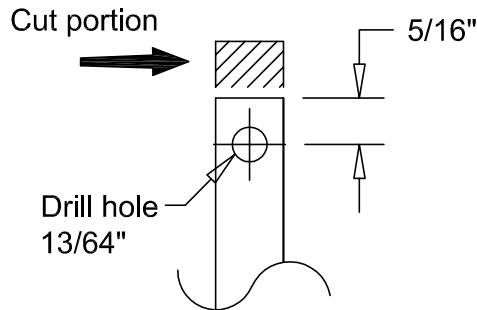


Modify top rods:

P/N 103674: (7 ft)
P/N 101472-4: (8 ft)
P/N 101472-3: (9-10 ft)

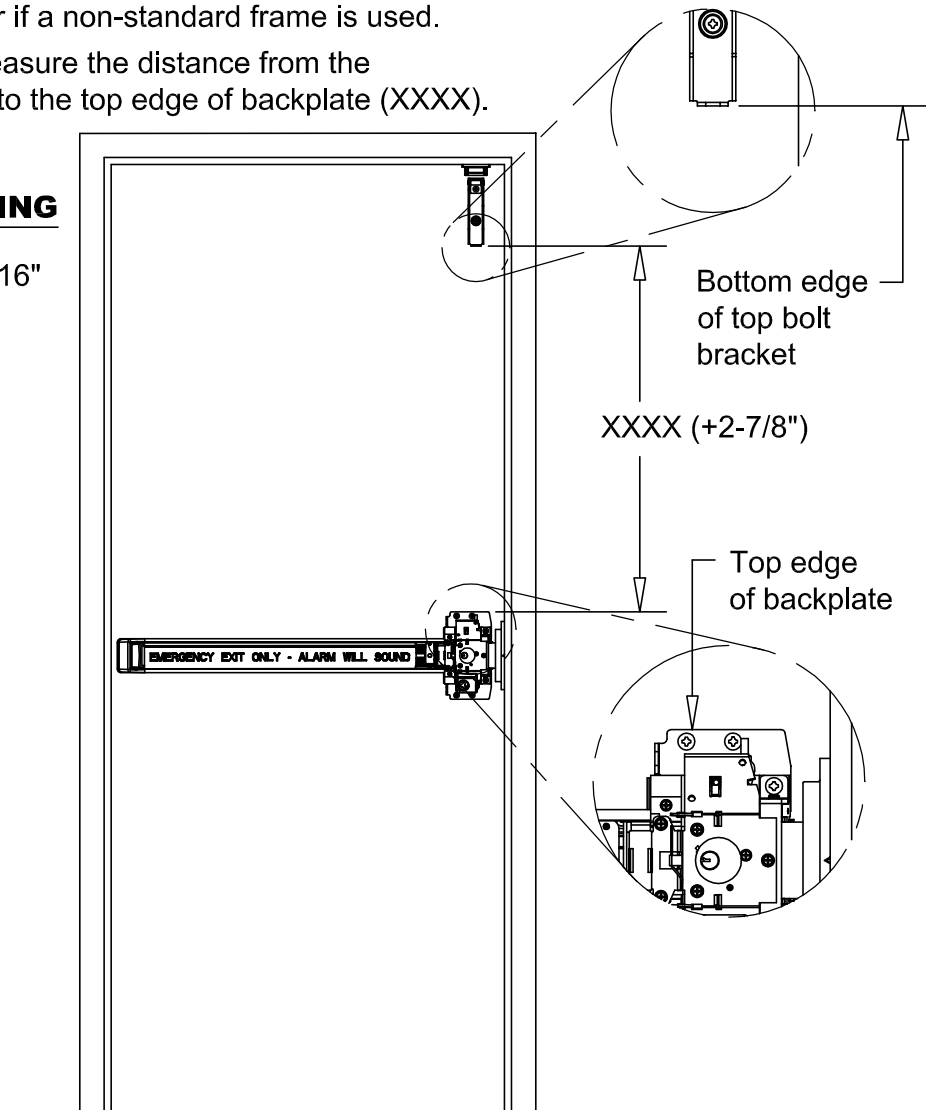


ACCESSORIES

 Bottom guard kit
P/N: 103558-10




Retro-fit plate kit
P/N: RK

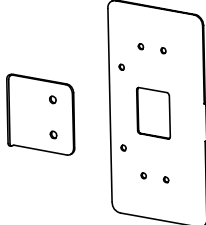


Rim cylinder plate
P/N: 102638



 Double door strike bracket kit
P/N: DDSK




Inside Pull
P/N: IP

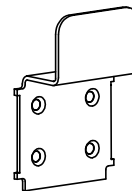


Rod cover kit
P/N: 103558-X




Cover lock kit
P/N: 105059-X

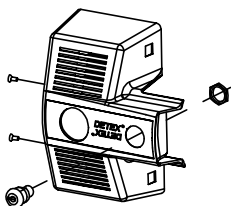

5 Pin Rim Cylinder
P/N: RC65-X

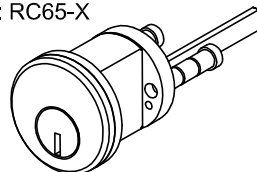

7 Pin Rim IC Cylinder
P/N: IC7R-626

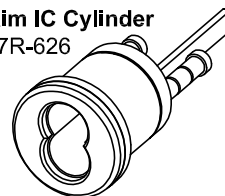

TEMPLATE for outside Trim

