


1990

FALCON®

4270101871

Concealed Vertical Rod Panic Device

Installation Instructions

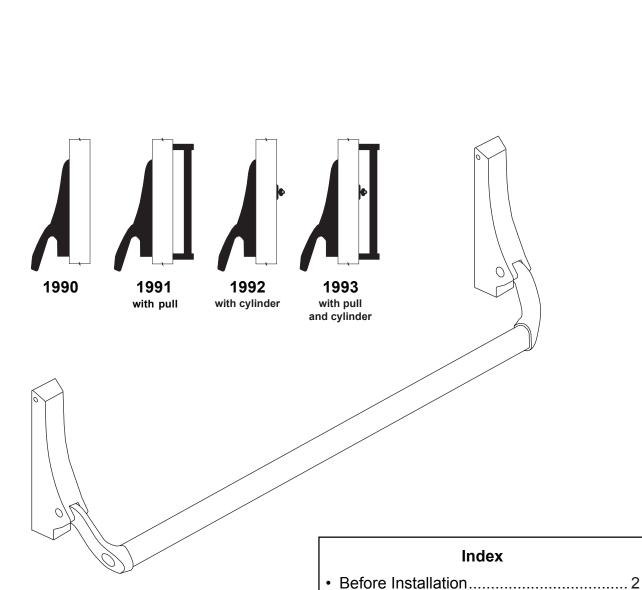

Before Installation

- 1. Check "Series 1990 Parts List" (see page 5).
- 2. Prepare door, threshold, and head jamb: aluminum door page 7; hollow metal door page 8; threshold and head jamb page 6.

A NOTES A

- 1. Handing of device can be changed.
- 2. Latch mounting center lines need not be the same as the housing center lines. The operating rod can work at an angle to permit mounting of latches so they will clear projections inside the door.
- 3. Crossbar length equals the distance between the housing vertical centerlines minus 1-3/4".

INSTALLATION

1 Install rod assemblies.

- 1a For hollow metal door, attach latch brackets to sides of top and bottom latches with #10-32 x 1/4" UFPH machine screws (Figure 1-1).
- 1b Slide top rod assembly into door. Hollow metal door: Secure each latch bracket to door with two #10-32 x 3/8" FPH machine screws. Aluminum door: Secure top latch to door with two #10-32 x 1/4" UFPH machine screws through face of door into front mounting holes on latch.
- 1c Install bottom rod assembly into door. If using rod latch (RL) bottom rod assembly: For hollow metal door, secure each latch bracket to door with two #10-32 x 3/8" FPH machine screws; for aluminum door, secure top latch to door with two #10-32 x 1/4" UFPH machine screws through face of door into front mounting holes on latch.
- 1d For hex bottom rod, install hex rod guide in door with #10-24 x 3/8" UFPHTC screws (Figure 1-2).
- 1e Install rod bearing bushing over end of each rod and secure with retaining ring (Figure 1-3).

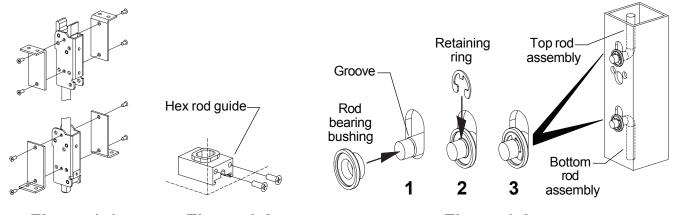


Figure 1-1


Figure 1-2

Figure 1-3

- 1f Check latch operation and rod length adjustment:
 - a. Place traveler over rod ends.
 - b. Slide traveler up. Top latch should release and hold rods in up position, and bottom latch should be completely retracted (flush with bottom edge of door).
 - c. Move top latch back to locked position. Rods should drop down, locking top latch and extending bottom latch approximately 1/2".
 - d. If necessary, adjust rod lengths for correct operation. Remove traveler after adjustment.

2 Install cylinder

Install cylinder. If required, cut cylinder tailpiece as shown. Heads of cylinder mounting bolts must be flush with door surface.

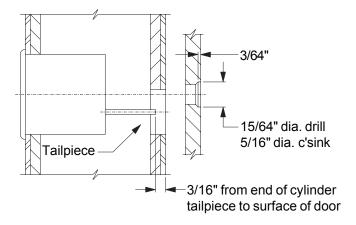

3 Install pinion cam and traveler.

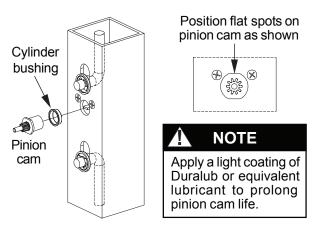


Figure 3-1

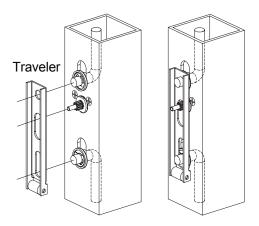


Figure 3-2

4 Install retractor.

Install retractor over pinion cam (Figure 4-1). Position retractor as shown in Figure 4-2 for holdback (HB) or night latch (NL) function.

Hold-back (HB): Turning key one complete rotation retracts latch bolt. If key is removed in this position, latch bolt stays retracted. Returning key to original position before removing allows latch bolt to extend.

Night latch (NL): Turning key as far as it will go retracts latch bolt. Key must be returned to original position to be removed, leaving the door locked.


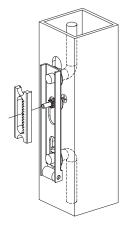


Figure 4-1

Hold-back (HB) Night latch (NL)






Install retractor with teeth to right as shown for both RHR and LHR doors; this makes all keys function in the same direction

Figure 4-2

5 Install top strike.

Install top strike with four #8-32 x 1/4" flat head Phillips undercut screws. The top strike is fabricated off center to permit pin adjustment by rotating the strike 90°. Use strike shims (supplied with strike) as needed to adjust the projection of the strike pin.



6 Install housing mounting studs, housings, and crossbar.

- 6a Install four housing mounting studs (Figure 6-1).
- 6b Install lock stile housing over mounting studs and secure with set screws (Figure 6-2). Test operation.
- 6c Install crossbar and hinge stile housing (Figure 6-3). Secure housing with set screws. Secure crossbar with two 1/4-20 x 1" Taptite screws.

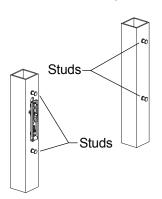


Figure 6-1

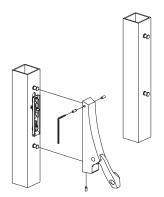


Figure 6-2


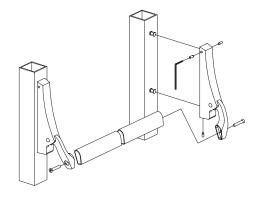


Figure 6-3


SERIES 1990 PARTS LIST

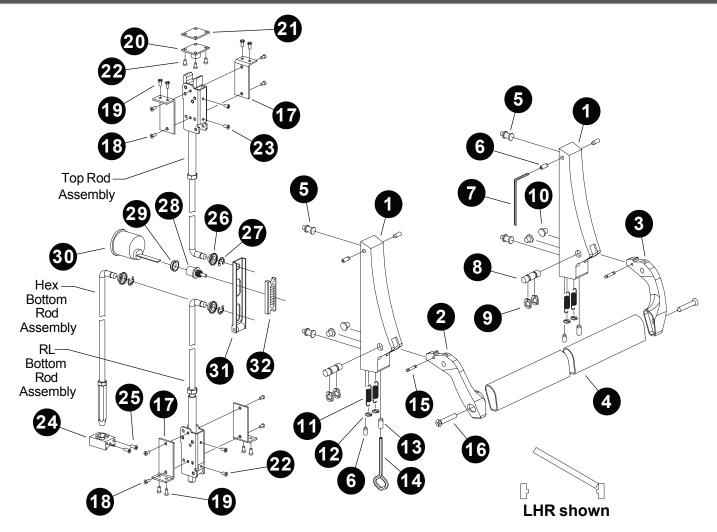


| Housing | | Qty. | Description |
|--|--|--|--|
| i louding | 17 | 4 | Latch bracket (hollow metal doors only) |
| Lever arm, LH | 18 | 8 | #10-32 x 1/4" UFPHMS |
| Lever arm, RH | 19 | 8 | #10-32 x 3/8" FPHMS |
| Crossbar | 20 | 1 | PB48 strike |
| Housing mounting stud | 21 | 3 | PB48 strike shim |
| 1/4-20 x 3/8" hex socket head set screw | 22 | 4 | #8-32 x 1/2" UFPHTC |
| 1/8" Allen wrench | 23 | 4 | #10-32 x 1/4" UFPHMS |
| Axle pin | 24 | 1 | Hex rod guide |
| Retaining ring | 25 | 2 | #10-24 x 3/8" UFPHTC |
| Axle bushing | 26 | 2 | Rod bearing bushing |
| Tension spring | 27 | 4 | Retaining ring |
| Spring retainer | 28 | 1 | Pinion cam |
| 7/16-14 x 3/4" hex socket head dogging screw | 29 | 1 | Cylinder bushing |
| Dogging key | 30 | 1 | Rim cylinder (optional; sold separately) |
| Spring pin | 31 | 1 | Traveler |
| 1/4-20 x 1" Taptite | 32 | 1 | Retractor |
| | Lever arm, RH Crossbar Housing mounting stud 1/4-20 x 3/8" hex socket head set screw 1/8" Allen wrench Axle pin Retaining ring Axle bushing Tension spring Spring retainer 7/16-14 x 3/4" hex socket head dogging screw Dogging key Spring pin | Lever arm, LH 18 Lever arm, RH 19 Crossbar 20 Housing mounting stud 21 1/4-20 x 3/8" hex socket head set screw 22 1/8" Allen wrench 23 Axle pin 24 Retaining ring 25 Axle bushing 26 Tension spring 27 Spring retainer 28 7/16-14 x 3/4" hex socket head dogging screw 29 Dogging key 30 Spring pin 31 | Lever arm, LH 18 8 Lever arm, RH 19 8 Crossbar 20 1 Housing mounting stud 21 3 1/4-20 x 3/8" hex socket head set screw 22 4 1/8" Allen wrench 23 4 Axle pin 24 1 Retaining ring 25 2 Axle bushing 26 2 Tension spring 27 4 Spring retainer 28 1 Dogging key 30 1 Spring pin 31 1 |

PARTS LIST (CONTINUED) **TOP ROD ROD LATCH (RL) BOTTOM HEX BOTTOM ROD ASSEMBLY ASSEMBLY ROD ASSEMBLY** Bottom rod: SU latch Bent rod 35.125" long 4270101806 4270100017 (can be shortened by 5") Bottom rod: Jam nut 3/8"-24 Bent rod 37.812" long NUT.101 (Pkg of 10) 4270101825 (can be shortened by 6") Top rod: • Bent rod 35.125" long (7' door) Jam nut 3/8"-24 4270100017 Jam nut 3/8"-24 NUT.101 (Pkg of 10) (can be shortened by 5") NUT.101 (Pkg of 10) • Bent rod 47.125" long (8' door) 4270100018 Hex bolt (can be shortened by 13") 4270101830 Optional ES (electric strike) Optional PL (pullman) RL bottom latch top latch (not shown) bottom latch (not shown) 4270100521 4270101482 4270100346


HEAD JAMB AND THRESHOLD PREPARATION

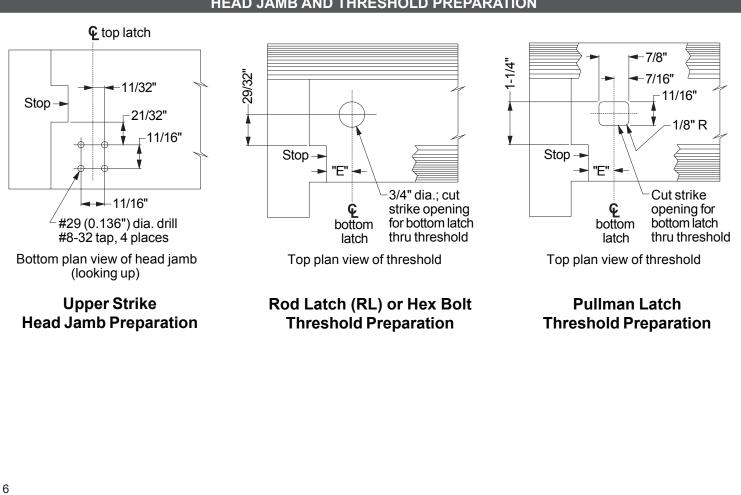

ALUMINUM DOOR PREPARATION

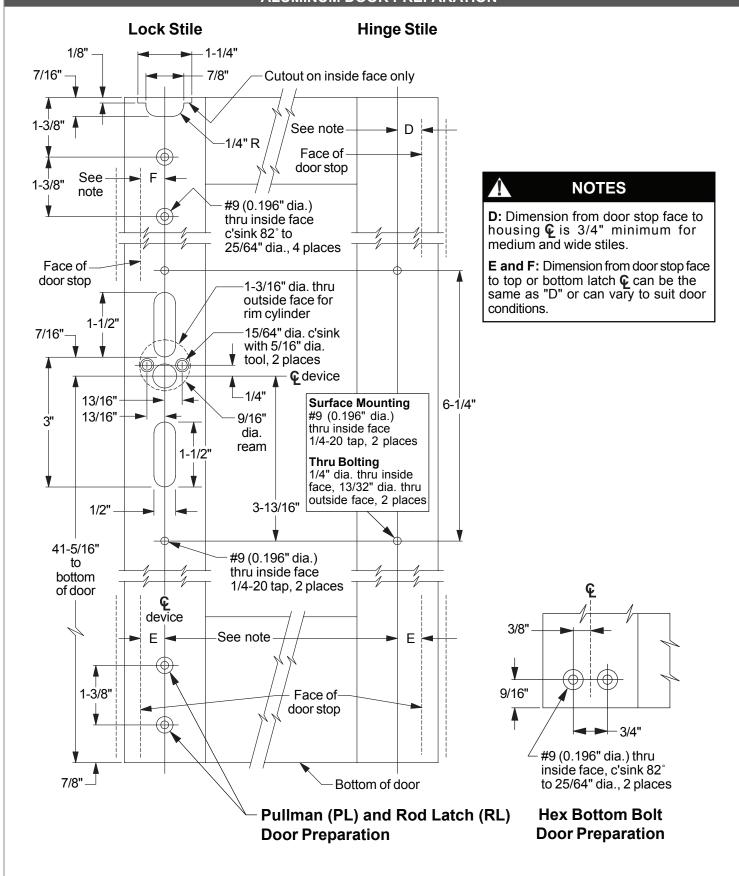

HOLLOW METAL DOOR PREPARATION

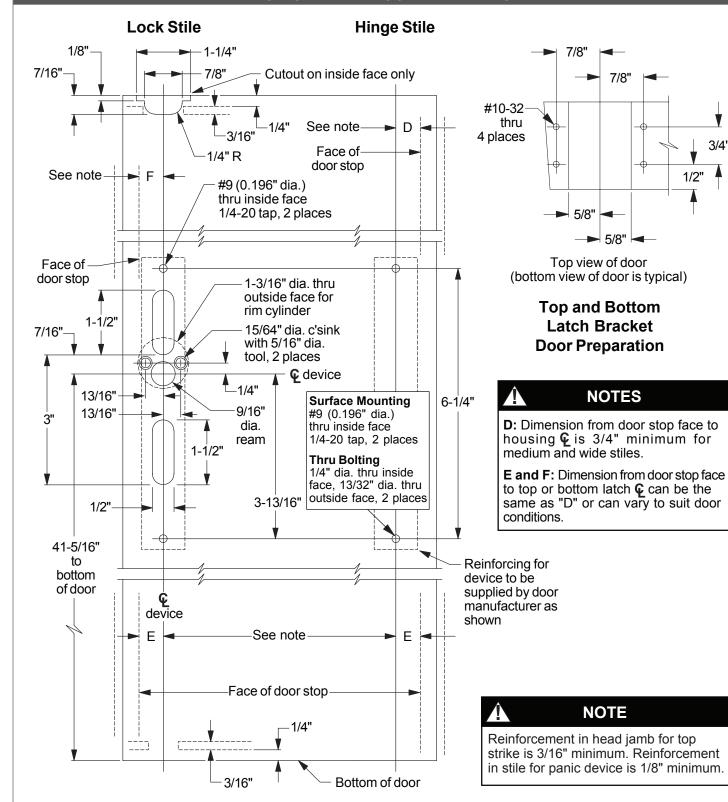



© Allegion 2016

3/4"

1/2'