



ASSA ABLOY

HES, Inc.
Phoenix, AZ 85044
Phone: (800) 626-7590

www.hesinnovations.com

HESCUT-MTK Metal Template Kit Installation

Product Description

The HESCUT-MTK Metal Template Kit simplifies electric strike installation by providing the proper measurements for frame preparation (see Figure 1).

The kit contains an ANSI template plate and multiple attachable lip templates: one each for the 1006, 1500, 1600, 4500, 5000, 5200, 7000, and 7501 Series electric strikes (see Figure 3). Each template is designed to be adjustable (slides in and out) to accommodate different frame reveal lengths, and the 1006/1500/1600 lip templates can be configured to accommodate both the standard series frame preparation and the "D" Series (extra offset) frame preparation (see Figure 2).

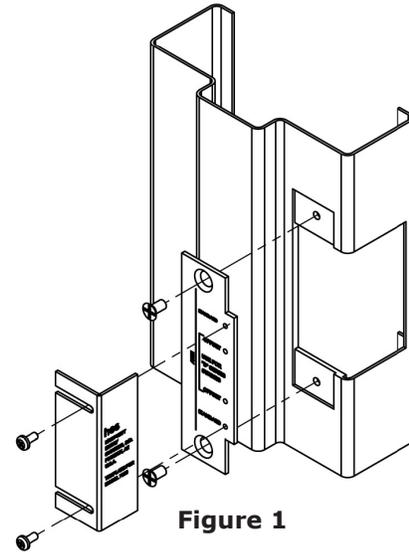


Figure 1

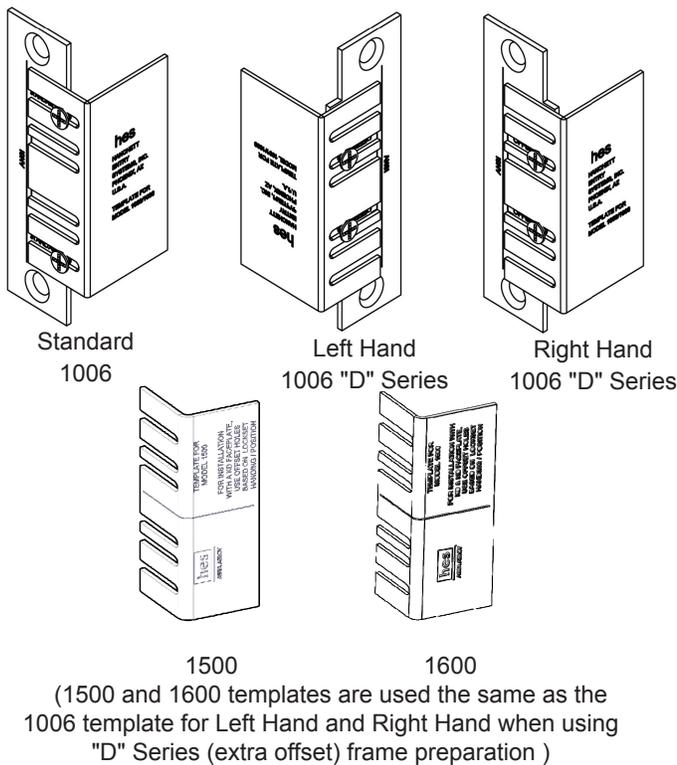


Figure 2

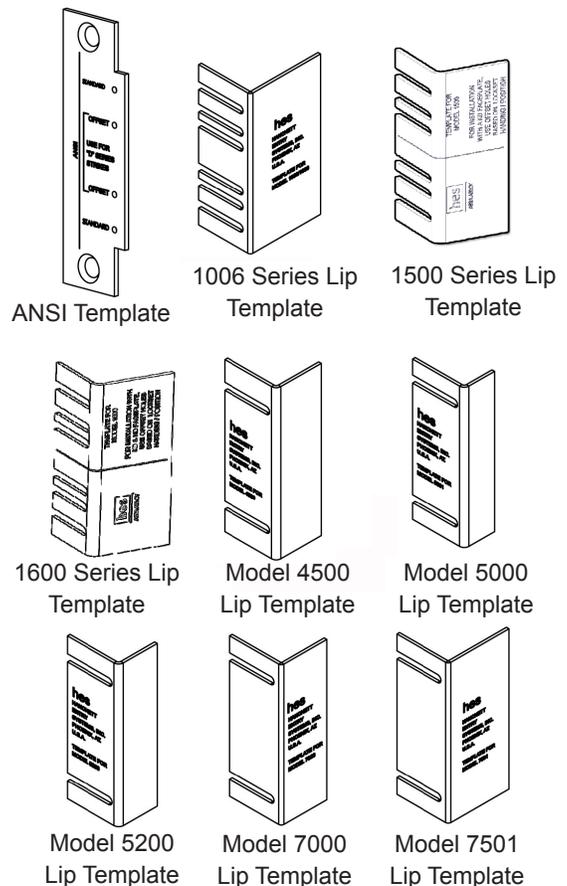


Figure 3

NOTE: Installation should be performed by a qualified service person, who complies with all local codes.

Assembling to a Wood or Metal Frame Without a Precut Strike Pocket

1. ADJUST the "L" piece slide for the applicable length of the different frame reveals (see Figure 4 (for 1006, 1500, and 1600), and Figure 5 (for 4500, 5000, 5200, 7000, and 7501)).

2. CENTER template on latchbolt centerline (see Figure 6).

NOTE: The following are the electric strike scribe mark measurements required for cutout:

5000	9/16" [14.29 mm]
5200	3/4" [19.05 mm]
4500	7/8" [22.23 mm]
7000	1-1/16" [26.99 mm]
7501	1-3/8" [34.93 mm]
1006	1-9/16" [39.69 mm]
1500	1-1/8" [28.58 mm]
1600	1-3/8" [34.93 mm]

3. SCRIBE around template lip.
4. LOCATE and MARK the mounting hole positions.
5. CUT the door frame inside of scribed lines.
6. INSTALL hardware in accordance with product installation instructions.

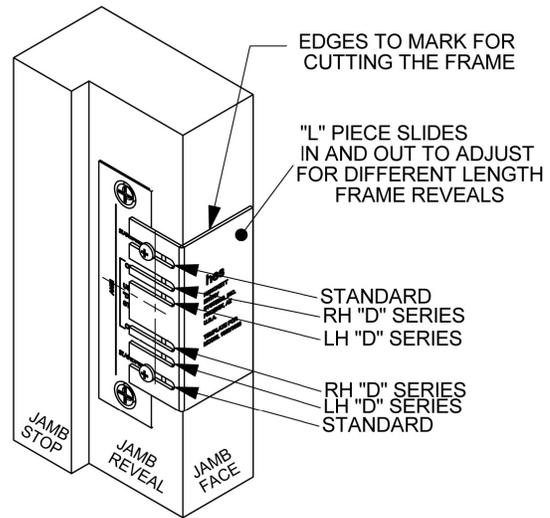


Figure 4

(Shows "L" piece slide for Models 1006, 1500, and 1600)

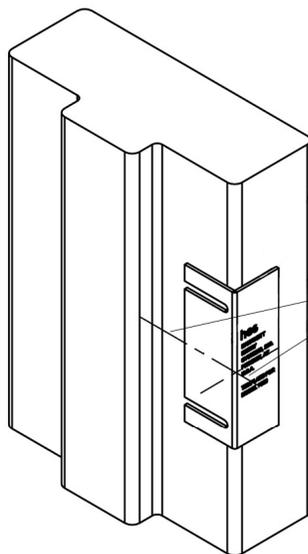


Figure 5

(Shows "L" piece slide example for Models 4500, 5000, 5200, 7000, and 7501)

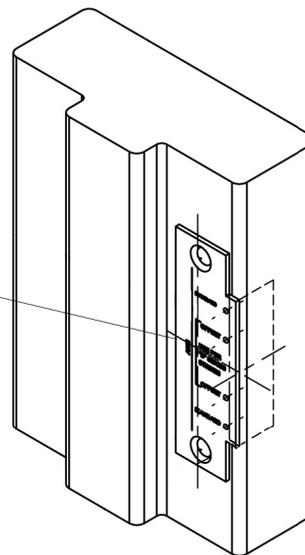


Figure 6

(Applies to all "L" piece slides)